



Trainings ▾

Engine Dataplate

Automotive Applications

The engine dataplate shows important facts about your engine. The engine serial number and CPL provide data for ordering parts and service. The engine dataplate **must not** be changed unless approved by Cummins Inc.

The dataplate is located on the fuel pump side of the engine, on the rocker housing. Have the following engine data available when communicating with a Cummins® Authorized Repair Location. The following information on the dataplate is **mandatory** when sourcing service parts:

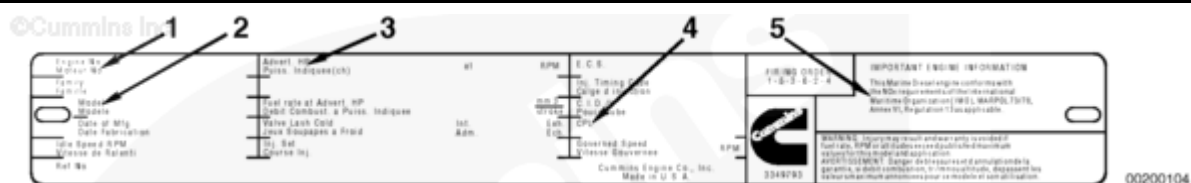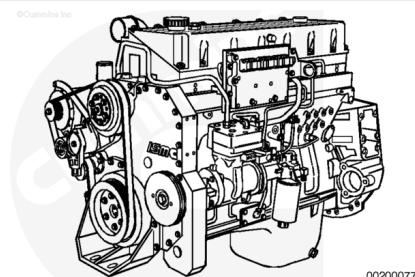



1. Engine serial number
2. Model
3. Horsepower and rpm rating
4. CPL
5. Emission statement (if applicable).

Marine and Industrial Applications

The engine dataplate shows important facts about your engine. The engine serial number and CPL provide data for ordering parts and service. The engine dataplate **must not** be changed unless approved by Cummins Inc.

The dataplate is located on the fuel pump side of the engine, on the rocker housing. Have the following engine data available when communicating with a Cummins Authorized Repair Location. The following information on the dataplate is **mandatory** when sourcing service parts:

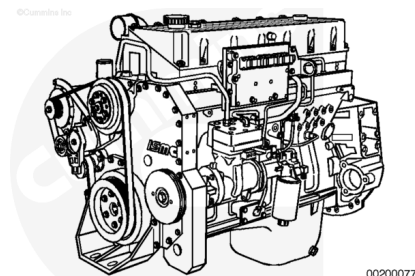

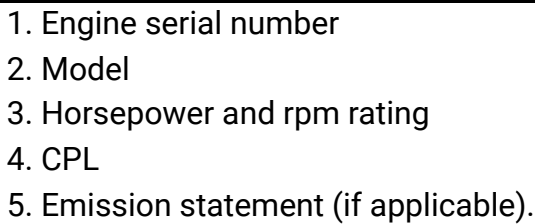

With CM870 and CM570

The abbreviations on the dataplate are explained as follows:

- P/N = part number
- S/N = serial number
- D/C = date code.



The abbreviations on the dataplate are explained as follows:

- P/N = part number
- S/N = serial number
- D/C = date code.




The abbreviations on the dataplate are explained as follows:

- P/N = part number
- S/N = serial number

- D/C = date code.

©Cummins Inc.

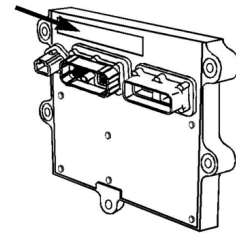

19c01295


Automotive with CM570

The ECM dataplate is located on the front of the ECM.

The abbreviations on the dataplate are explained as follows:

- P/N = part number
- S/N = serial number
- D/C = date code.

©Cummins Inc.

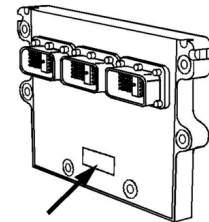

17c00046


Marine and Industrial Applications

There are two dataplates on top of the ECM.

The dataplate on the left contains the part number (P/N), serial number (S/N), and date code (D/C) of the ECM.

The dataplate on the right contains the engine serial number (ESN), ECM code, and date.

©Cummins Inc.

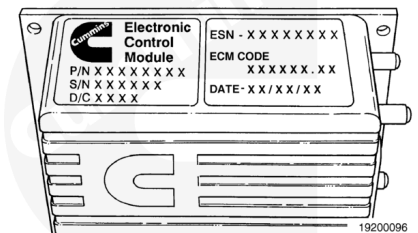


19200096

Cummins® Engine Nomenclature

Automotive Applications

The Cummins® engine nomenclature provides the data as illustrated in the graphic.

©Cummins Inc.

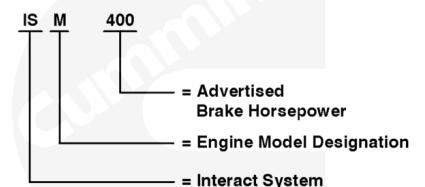


00200065

Industrial and Power Generation

The Cummins® engine nomenclature provides the data as illustrated in the graphic.

Note : The following letters designate some of the different market applications for a Cummins® engine.

- A = agriculture
- C = construction
- M = marine
- G = generator drive.

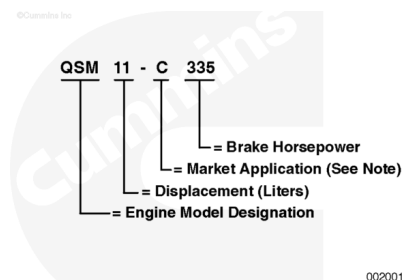


Marine Applications

The Cummins® engine nomenclature provides the data as illustrated in the graphic.

Note : The following letters designate some of the different market applications for a Cummins® engine.

- A = agriculture
- C = construction
- M = marine
- G = generator drive.

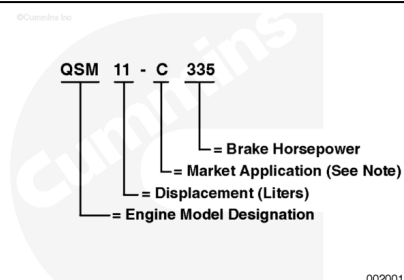

Fuel Injection Pump Dataplate

The fuel pump dataplate is located on top of the fuel pump. It provides the data needed to calibrate the fuel pump.

