


Trainings ▾

Engine Views

The following illustrations contain information about engine components, filter locations, drain points, and access locations for instrumentation and engine controls. The information and configuration of components shown in these illustrations are of a general nature. Some component locations will vary, depending on applications and installations.

Marine Applications


©Cummins Inc

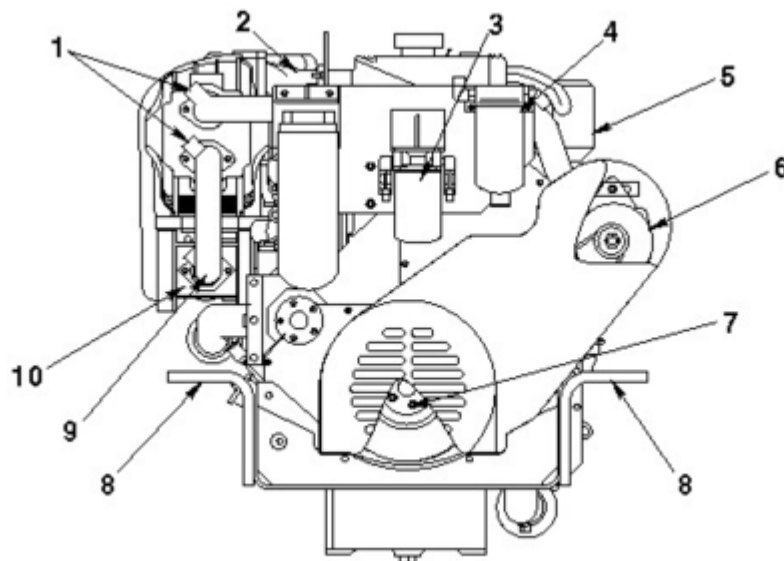

17200015

Front - QSM11 Marine


1. Zinc plugs
2. Air crossover
3. Coolant filter
4. Fuel Filter
5. Crankcase breather
6. Alternator
7. Vibration damper
8. Front engine mounts
9. Aftercooler-to-heat-exchanger pipe
10. Heat exchanger.

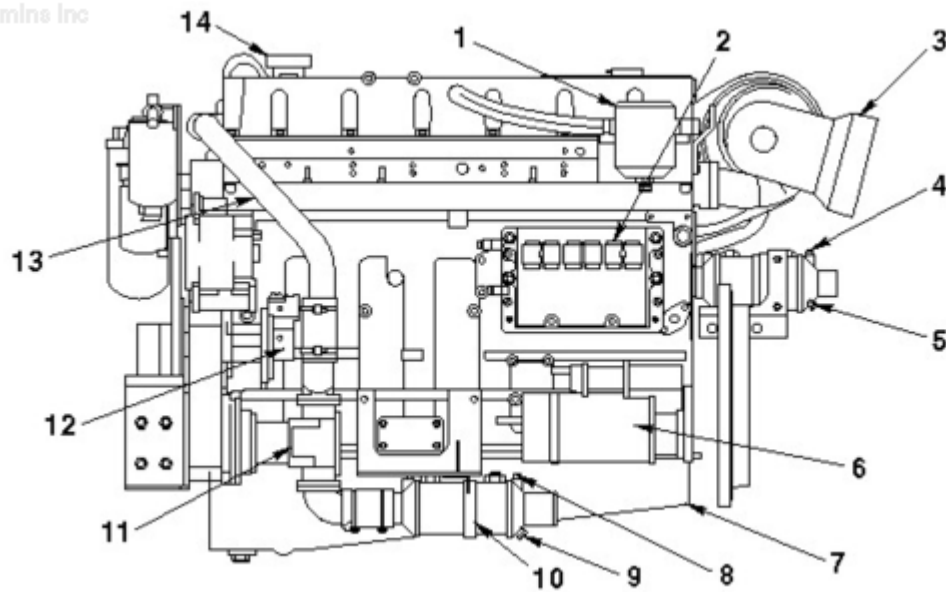

17200012

Left (Port) - QSM11 Marine - Components


1. Crankcase breather
2. ECM
3. Exhaust elbow
4. Zinc anode
5. Gear cooler drain plug
6. Starter
7. Oil pan
8. Zinc anode (fuel cooler)
9. Fuel cooler drain plug
10. Fuel cooler
11. Sea water pump
12. Fuel pump
13. Sea-water-pump-to-aftercooler pipe
14. Oil fill.

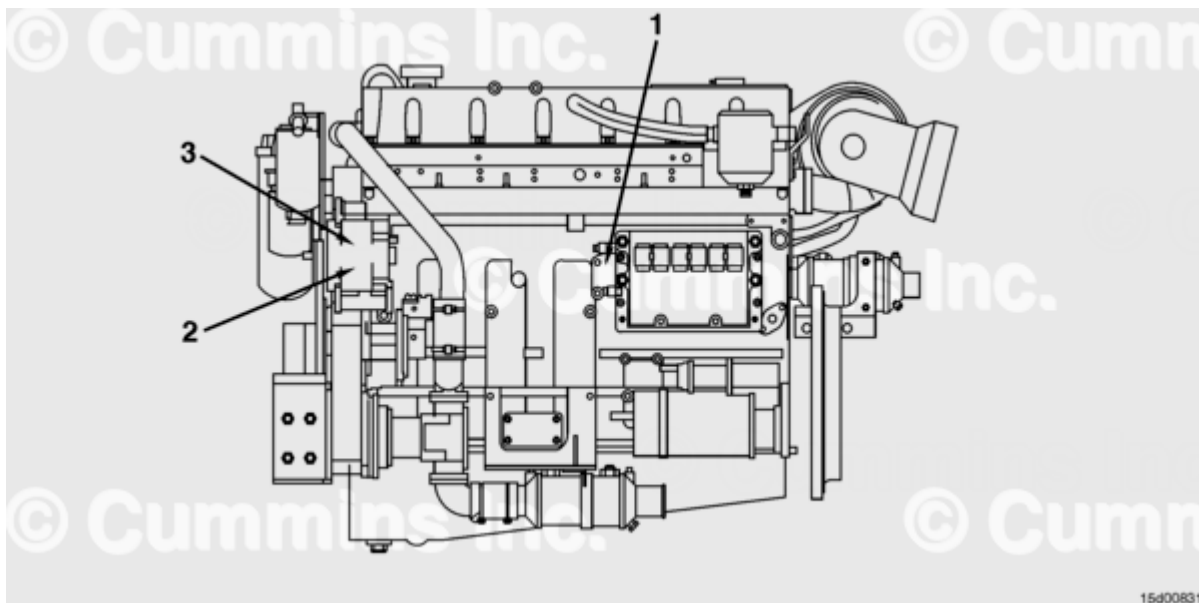

Left (Port) - QSM 11 Marine - Sensors


1. Ambient air pressure sensor
2. Oil pressure/temperature sensor (behind fuel pump)
3. Engine position sensor (behind fuel pump).

©Cummins Inc

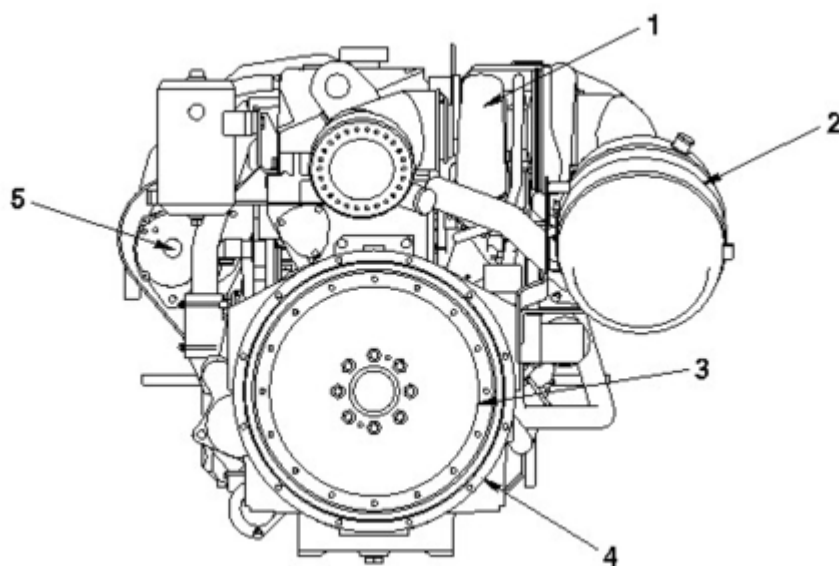

Back - QSM11 Marine


1. Turbocharger
2. Air cleaner
3. Flywheel
4. Flywheel housing
5. Alternator.

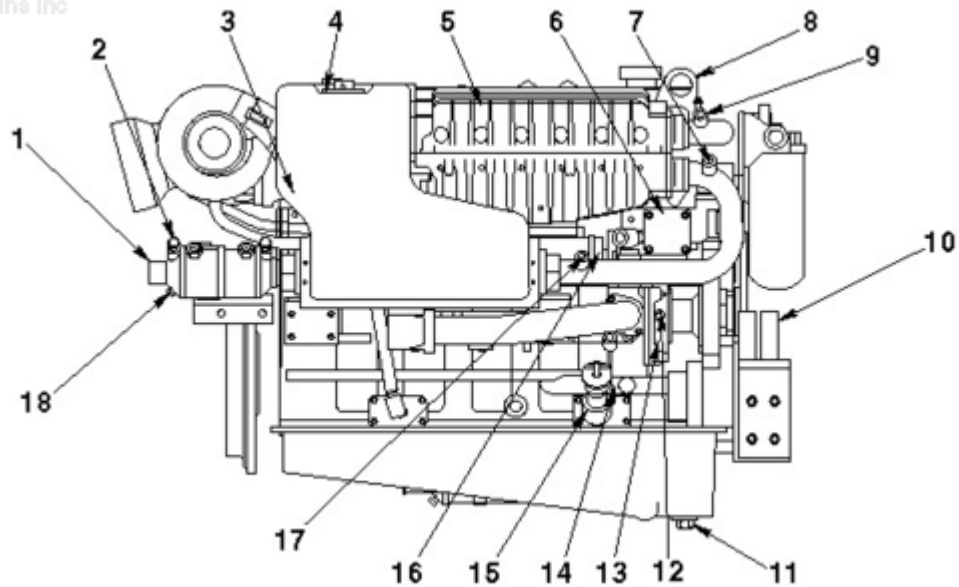

17200014

Right (Starboard) - QSM11 Marine - Components


1. Gear oil cooler
2. Zinc anode (gear cooler)
3. Heat exchanger
4. Expansion tank
5. Aftercooler
6. Thermostat housing
7. Zinc anode
8. Engine lifting bracket
9. Zinc anode
10. Vibration damper
11. Oil pan drain plug
12. Coolant drain
13. Water pump
14. Oil dipstick
15. Oil fill
16. Engine oil cooler
17. Zinc anode
18. Gear oil cooler drain plug.

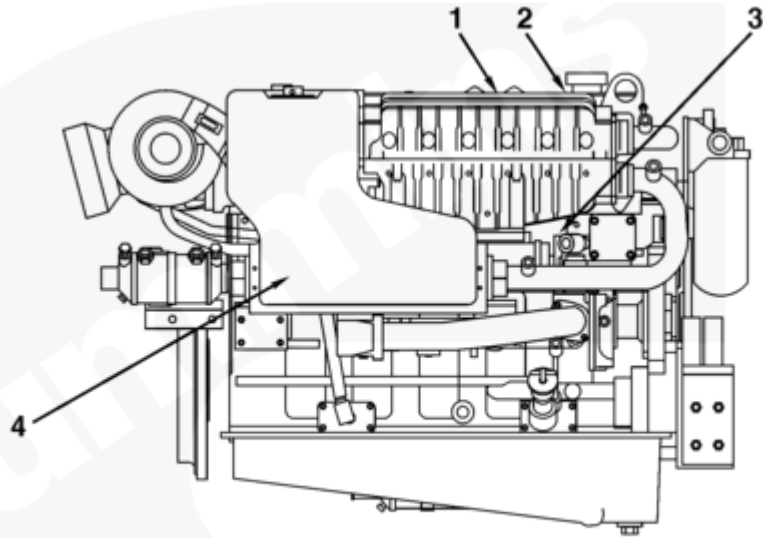

15900841

Right (Starboard) - QSM11 Marine - Sensors

1. Intake manifold temperature sensor
2. Intake manifold pressure sensor
3. Coolant temperature sensor
4. Coolant level sensor.

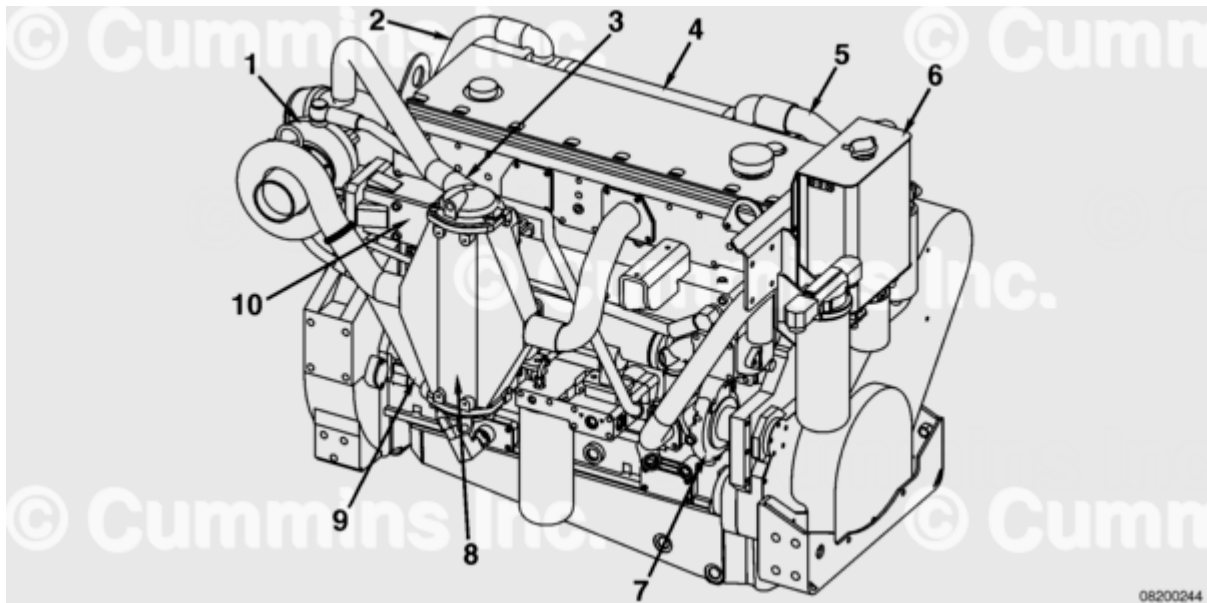


08200244

Right (Starboard) - QSM11 Marine - Heat Exchanger


1. Turbocharger with water cooled turbine housing
2. Coolant flow from heat exchanger
3. Aftercooler sea water outlet
4. Heat exchanger
5. Coolant flow to heat exchanger
6. Expansion tank
7. Water pump
8. Aftercooler

- 9. Aftercooler sea water inlet
- 10. Water cooled exhaust manifold.

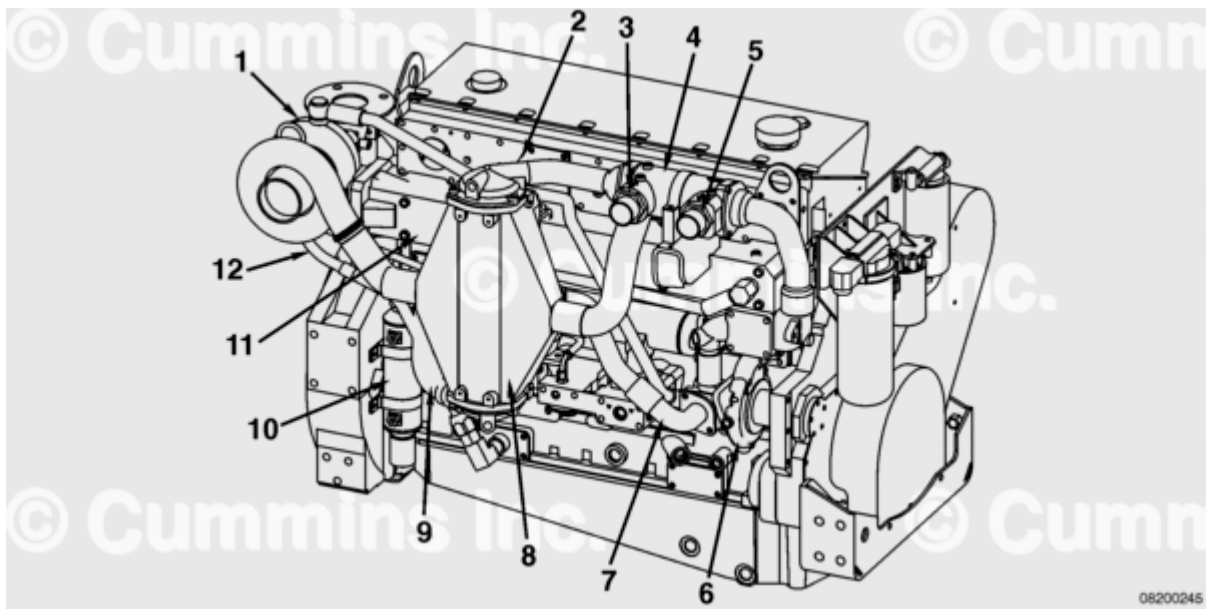

Right (Starboard) - QSM11 Marine - Keel Cooled

- 1. Turbocharger with water cooled turbine housing
- 2. Coolant inlet (aftercooler)
- 3. Coolant in from keel cooler
- 4. LTA thermostat housing
- 5. Coolant out to keel cooler
- 6. Water pump
- 7. Coolant to water pump
- 8. Aftercooler
- 9. Coolant outlet (aftercooler) to water pump
- 10. Gear oil cooler (optional)
- 11. Water cooled exhaust manifold
- 12. Coolant out from turbocharger.

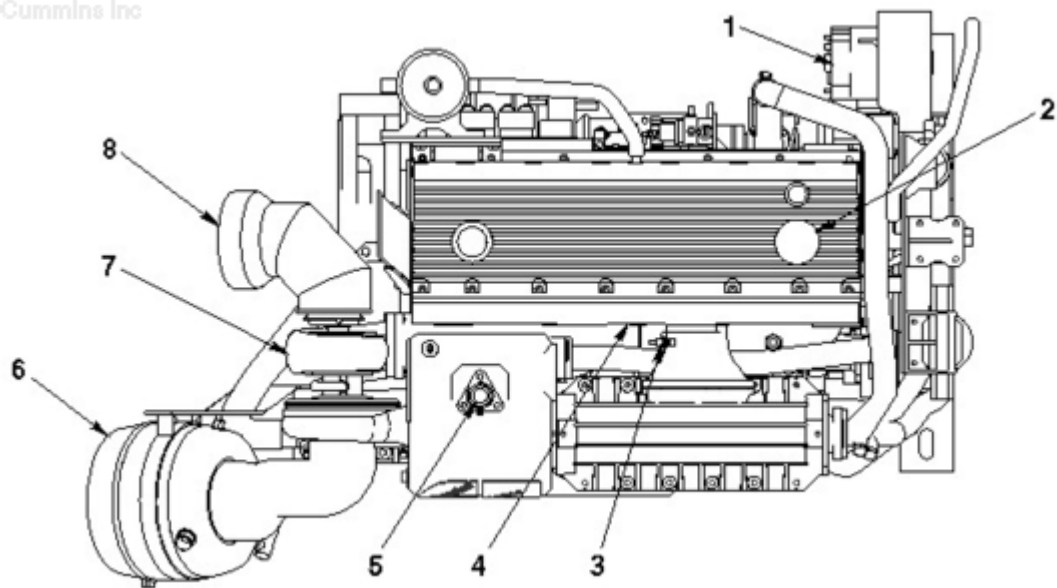

17200016

Top - QSM11 Marine

1. Alternator
2. Oil fill (alternate)
3. Intake manifold temperature sensor
4. Intake manifold pressure sensor
5. Coolant fill
6. Air cleaner
7. Turbocharger
8. Exhaust elbow.