


Trainings ▾

Remove


Clean the area around the fuel pump actuator.

Disconnect the fuel pump actuator (2) from the engine harness.

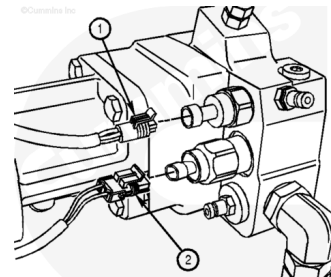

19400779

Remove the fuel pump actuator.

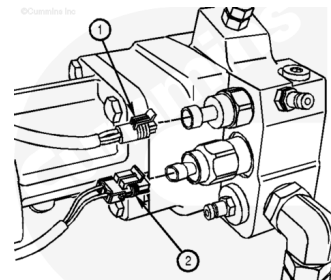

19400779


Install

Install a new o-ring. Use clean engine oil to lubricate the sensor o-ring.

Install a new fuel pump actuator.

Torque Value: 24 n•m [212 in-lb]

Connect the actuator connector to the actuator (2).

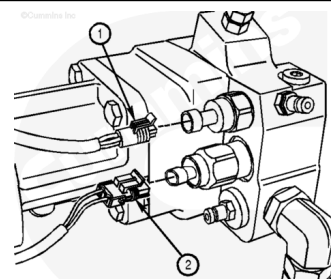

19400779

