

Trainings ▾


Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.


⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

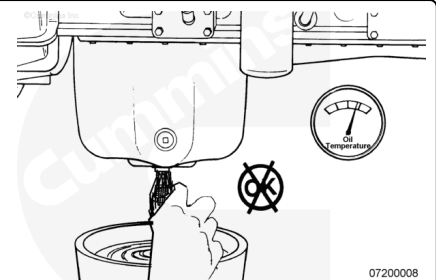


Drain the lubricating oil. Refer to Procedure 007-037 in Section 7 (</qs3/pubsys2/xml/en/procedures/10/10-007-037-tr.html>).

Remove the oil pan. Refer to Procedure 007-025 in Section 7 (</qs3/pubsys2/xml/en/procedures/10/10-007-025-tr.html>).

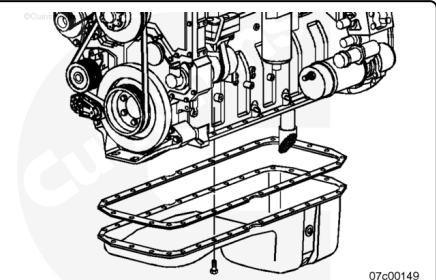


Remove the lubricating oil suction tube. Refer to Procedure 007-035 in Section 7 (</qs3/pubsys2/xml/en/procedures/10/10-007-035-tr.html>).

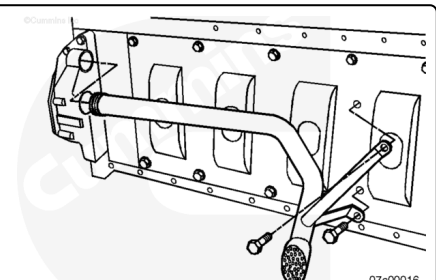

Remove

Remove the 10 capscrews and the block stiffener plate.

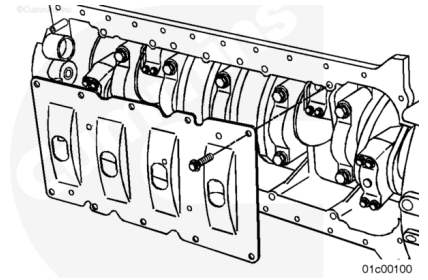


Install

Install the block stiffener plate and the 10 capscrews. Tighten the capscrews.


Torque Value:

1. 68 n•m [50 ft-lb]
2. Rotate capscrews 60 degrees.

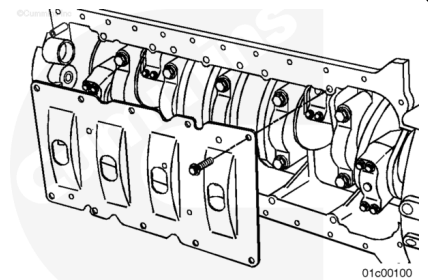


Finishing Steps


Install the lubricating oil suction tube. Refer to Procedure 007-035 in Section 7 (</qs3/pubsys2/xml/en/procedures/10/10-007-035-tr.html>).

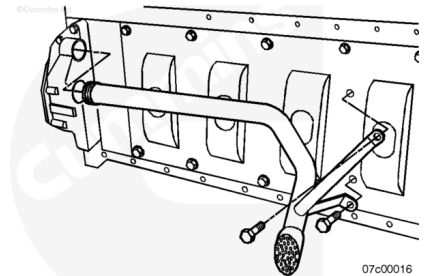


Install the oil pan. Refer to Procedure 007-025 in Section 7 (</qs3/pubsys2/xml/en/procedures/10/10-007-025-tr.html>).

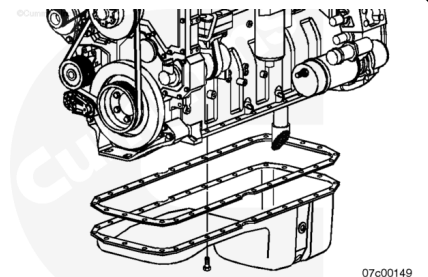

Prime the lubricating oil system. Refer to Procedure 007-037 in Section 7 (/qs3/pubsys2/xml/en/procedures/10/10-007-037-tr.html).

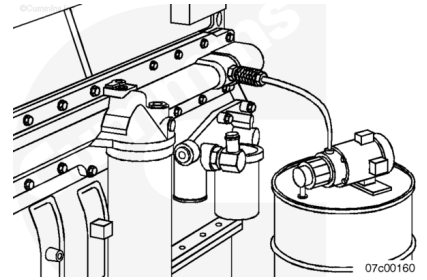

Fill the engine with lubricating oil. Refer to Procedure 007-037 in Section 7 (/qs3/pubsys2/xml/en/procedures/10/10-007-037-tr.html).

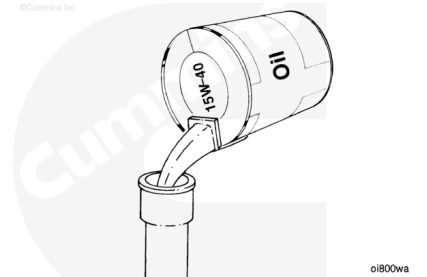

Operate the engine until it reaches a temperature of 82°C [180°F]. Check for lubricating oil leaks.

