

Trainings ▾


General Information

Two types of crankcase breather element are available for the crankcase breather assembly. Element 1 is a filter element that utilizes a traditional filtration media design and has a scheduled maintenance requirement.



Element 2 is a maintenance-free breather insert that does **not** utilize a filtration media and has no scheduled maintenance requirement. Maintenance-free breather inserts are marked "Maintenance-Free" on the outer facing surface.

Factory assembled maintenance-free crankcase breather assemblies are also marked "Maintenance-Free" on the breather housing.

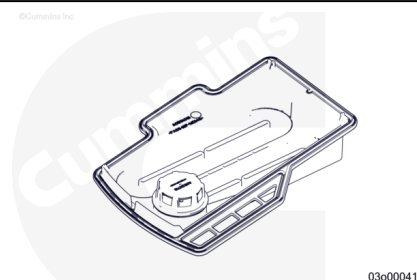

Remove

Note : Maintenance-free crankcase breather assemblies do **not** require scheduled maintenance and should **not** be disassembled unless necessary. If a maintenance-free crankcase breather insert is removed, it should be inspected for reuse and only discarded if it does **not** meet the guidelines.


Note : If necessary, discard the crankcase breather element in accordance with local environmental regulations.

Loosen the eight cover mounting captive capscrews.

Remove the element cover.

Remove and discard the crankcase breather element.

Wipe out any excess dirt or oil from the inside of the cover.

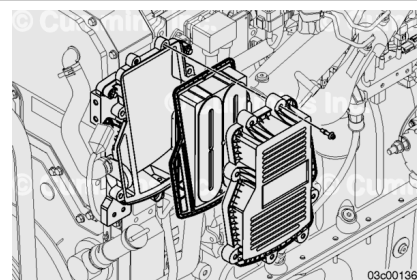


Clean and Inspect for Reuse

Wipe off any excess dirt or oil from the crankcase breather insert.

Clean the crankcase breather insert. Allow to air dry.

Inspect the crankcase breather insert housing and outer seal for cuts, cracks, or other damage.

Replace if damage is observed.

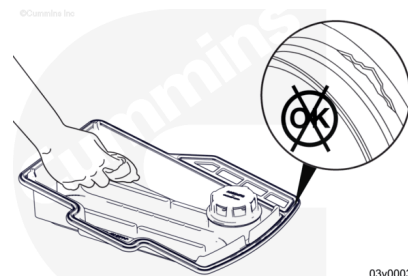

Install

Install the new crankcase breather element in the breather housing.

Make sure the element is properly seated in the housing so its seal will **not** be cut, crimped, or otherwise compromised when installing the housing cover.

Install the cover.

Tighten the eight captive mounting capscrews.

Torque Value: 5.2 n·m [46 in-lb]

