

Trainings ▾

Preparatory Steps


- Remove the charge air cooler connection hose and hose clamp from the EGR mixer inlet. Refer to Procedure 010-027 (</qs3/pubsys2/xml/en/procedures/10/10-010-027.html>).
- Remove the air compressor supply line. Refer to Procedure 012-014 (</qs3/pubsys2/xml/en/procedures/10/10-012-014-tr.html>).
- Remove the v-band clamp between the EGR mixer and the charge air cooler inlet adapter.



Remove

Do **not** remove the EGR inlet pipe into the EGR mixer. This is a precision interface and performance will be affected if disturbed. There is no service procedure for this and none is required.


Remove the capscrews at the four-bolt flange between the EGR mixer and the air intake horn.

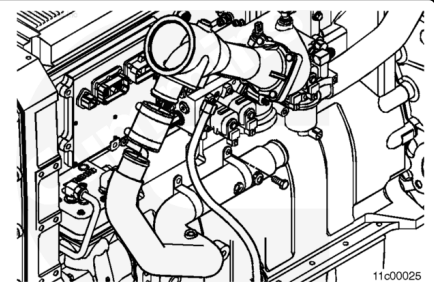

Clean and Inspect for Reuse

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

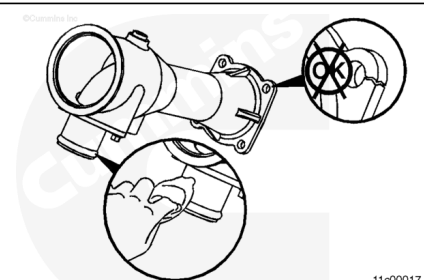

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Use compressed air to blow out any debris or soot buildup inside the EGR mixer.

Clean all mounting surfaces with solvent.


Dry with compressed air.

Inspect the EGR mixer for cracks. Replace the EGR mixer if cracks are found.

Inspect the v-band clamps for signs of overextension. The band **must not** be bent or cracked.

Inspect the v-band clamp thread for damage.

Replace the v-band clamp if damage is found.

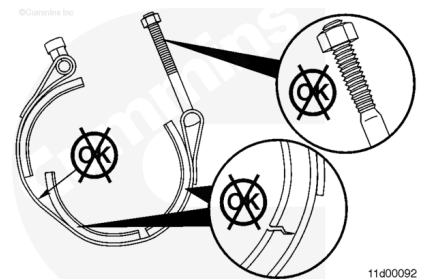


Inspect the hose clamp(s) for cracks or other damage.

Replace hose clamp(s) if cracks or other damage is found.

Inspect hose(s) for cracks or other damage.

Replace hose(s) if cracks or other damage is found.

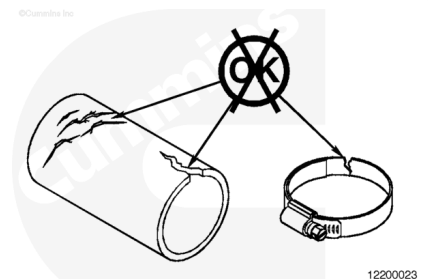


Install

Install the hose at the EGR mixer inlet.


Install a new o-ring between the EGR mixer and the air intake connection. Install and tighten capscrews.

Torque Value: 34 n•m [25 ft-lb]

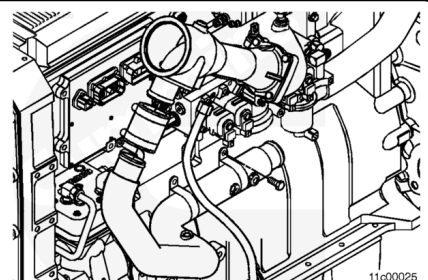

Finishing Steps

- Install the v-band clamp on the inlet adapter and the EGR mixer.
- Install the air compressor supply line. Refer to Procedure 012-014 (</qs3/pubsys2/xml/en/procedures/10/10-012-014-tr.html>).
- Install the charge air cooler connection. Refer to Procedure 010-027 (</qs3/pubsys2/xml/en/procedures/10/10-010-027.html>).
- Start and operate the engine and check for leaks at the air connections.

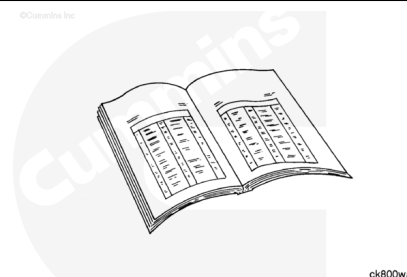

If failure resulted in coolant, oil, excessive fuel or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Refer to Procedure 014-013 (</qs3/pubsys2/xml/en/procedures/101/101-014-013-tr.html>).