

Trainings ▾


Maintenance Check

Inspect the exhaust piping for leaks, cracks, and loose connections.

Inspect for leaks at all band locations.


Tighten the pipe clamps, if necessary.

Refer to the OEM service manual for the correct torque value.

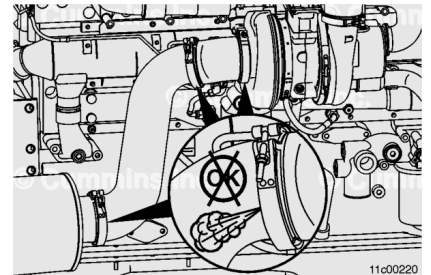

Inspect the exhaust stack piping on trucks for proper orientation.

Correct if **not** oriented correctly.

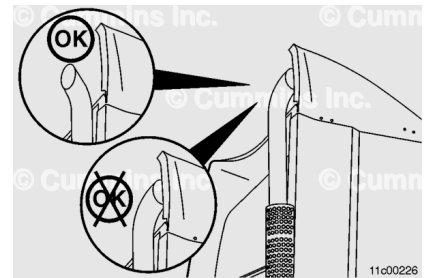

Inspect the exhaust outlet piping for proper orientation in Bus applications.

Correct if **not** oriented correctly.

