

Trainings ▾


Preparatory Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

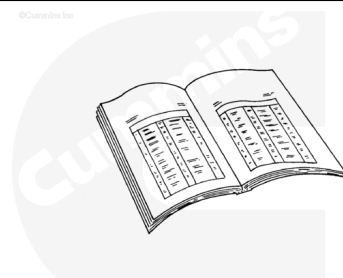


ck800wa


- Drain the cooling system. Use the following procedure in the Signature™, ISX, and QSX15 Service Manual, Bulletin 3666239. Refer to Procedure 008-018 in Section 8.
(/qs3/pubsys2/xml/en/procedures/10/10-008-018-tr.html) Use the following procedure in the ISM, ISMe, and QSM11 Service Manual, Bulletin 3666322. Refer to Procedure 008-018 in Section 8.
(/qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html)
- Disconnect the fuel line to the aftertreatment fuel injector. Refer to Procedure 011-051 in Section 11.
(/qs3/pubsys2/xml/en/procedures/101/101-011-051-tr.html)
- Disconnect the coolant lines to the aftertreatment fuel injector. Refer to Procedure 011-051 in Section 11.
(/qs3/pubsys2/xml/en/procedures/101/101-011-051-tr.html)
- Remove the aftertreatment fuel injector from the exhaust adapter pipe. Refer to Procedure 011-042 in Section 11.
(/qs3/pubsys2/xml/en/procedures/101/101-011-042-tr.html)

Setup

Plug one of the coolant connections with an M16 x 1.5 plug.

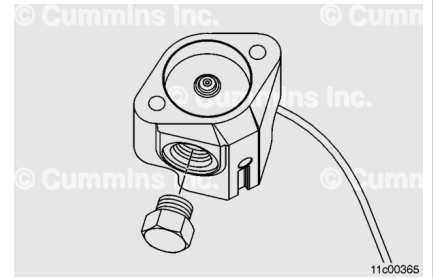


Fill the nozzle area with water.

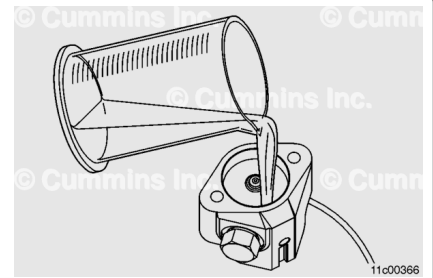

Test

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

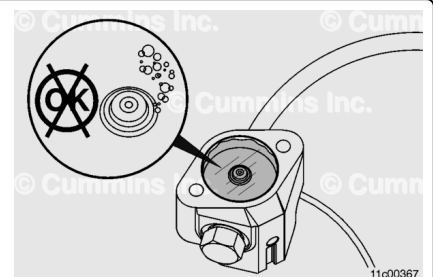

Apply compressed air regulated at 241 kpa [35 psi] to the opposite coolant connection.


If air bubbles are seen in the nozzle area, the aftertreatment injector has a crack that is allowing coolant to leak through.

The injector **must** be replaced.

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

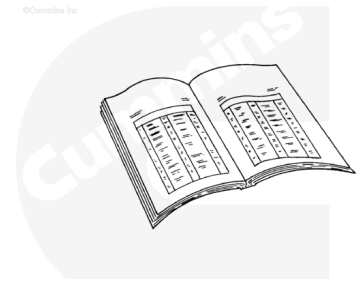

- Remove the plug and compressed air connection from the coolant connection points.
- Install a new fibrous insulator.
- Install a new metal gasket.
- Install the aftertreatment fuel injector assembly onto the adapter pipe. Refer to Procedure 011-042 in Section 11. (</qs3/pubsys2/xml/en/procedures/101/101-011-042-tr.html>)
- Connect the fuel line to the aftertreatment fuel injector. Refer to Procedure 011-051 in Section 11. (</qs3/pubsys2/xml/en/procedures/101/101-011-051-tr.html>)
- Connect the coolant lines to the aftertreatment fuel injector. Refer to Procedure 011-051 in Section 11. (</qs3/pubsys2/xml/en/procedures/101/101-011-051-tr.html>)
- Connect the wiring harness to the aftertreatment injector.
- Fill the cooling system. Use the following procedure in the Signature™, ISX, and QSX15 Service Manual, Bulletin 3666239. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/10/10-008-018-tr.html>) Use the following procedure in the ISM, ISMe, and QSM11 Service Manual, Bulletin 3666322. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html>)
- Start the engine, check for leaks, and verify all fault codes are inactive.