


Trainings ▾

Initial Check

Remove the air governor or air governor line from the air compressor. Remove the air intake line from the air compressor cylinder head.

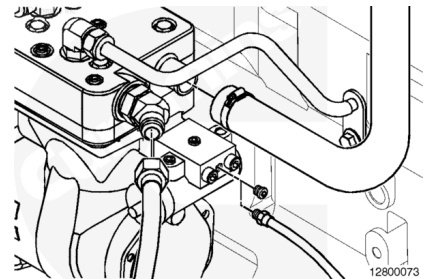


Operate the engine to activate the air compressor.

Under normal operating conditions, the air compressor intake port will create a vacuum.

To check for the presence of a vacuum, hold a piece of paper or cardstock 5 cm [2 in] in front of the air compressor intake port.

Observe the response of the paper.

Shut the engine off.

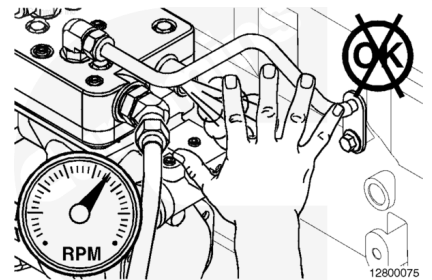


If the paper is blow away from the air compressor intake port, replace these components:

- Air pressure relief valve. See equipment manufacturer service information.


Note : For engines equipped with Wabco™ air compressors, the air pressure relief valve is an integral part of the air compressor cylinder head.

- Air compressor cylinder head.
 - Single cylinder air compressor. Refer to Procedure 012-007 in Section 12.
(</qs3/pubsys2/xml/en/procedures/101/101-012-007-tr.html>)
 - Twin cylinder air compressor. Refer to Procedure 012-008 in Section 12.
(</qs3/pubsys2/xml/en/procedures/101/101-012-008-tr.html>)

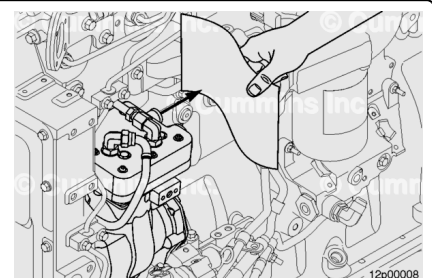


If the paper does **not** move:

- Check the downstream air system components for damage or restriction.
- Make sure the intake and exhaust valves are functioning properly.
 - Refer to Procedure 012-014 in Section 12 (</qs3/pubsys2/xml/en/procedures/35/35-012-014-tr.html>) for the ISM, ISMe, and QSM11 Service Manual, Bulletin 3666322, and the ISM CM876 SN Service Manual, Bulletin 4022196.
 - Refer to Procedure 012-014 in Section 12 (</qs3/pubsys2/xml/en/procedures/175/175-012-014-tr.html>) for the ISX15 CM2250 SN Service Manual, Bulletin 4310736.
 - Refer to Procedure 012-014 in Section 12 (</qs3/pubsys2/xml/en/procedures/10/10-012-014.html>) for the Signature™ ISX, QSX15 Service Manual, Bulletin 3666239.

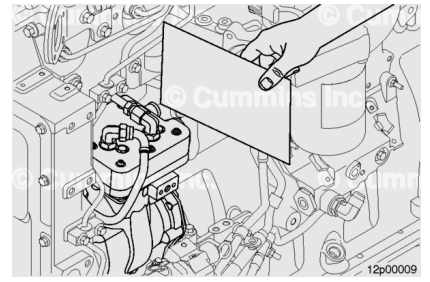

If the paper is pulled toward the air compressor intake, the air compressor relief valve is working properly.

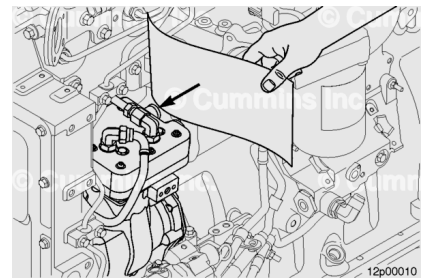

Install the air intake line to the cylinder head.

Install the air governor or air governor line to the air compressor.

