

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools


- No recommended Cummins® service tools required

Additional Service Items


- No additional service items required.

Initial Check

The cooling system **must** be designed to allow air to escape while filling the coolant system.

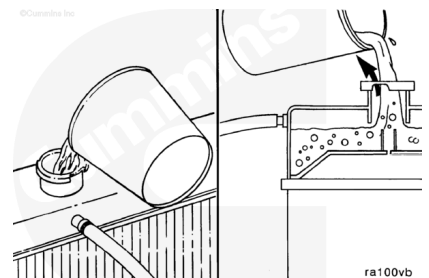

During engine operation, coolant will continuously flow through the engine vent line to remove air from the coolant.

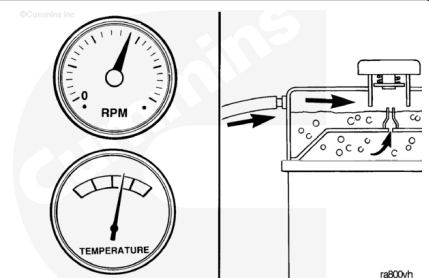

The cooling system vent line is plumbed from a special connection located on the top of the thermostat housing to Exhaust Gas Recirculation (EGR) cooler vent port, then goes to the radiator fill tank or auxiliary tank above the coolant level.

