

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Digital Multimeter Kit, Part Number 3400162
- Electrical Test Lead Kit, Part Number 5299367


Additional Service Items

- No additional service items required.

General Information

The compressor recirculation valve (1) recirculates air from the turbocharger outlet to the turbocharger inlet when the throttle closes. The compressor recirculation valve is mounted on the turbocharger. The valve is controlled by the Engine Control Module (ECM).


The valve is closed when the valve is **not** energized. The valve will open when the ECM detects the throttle is closed.

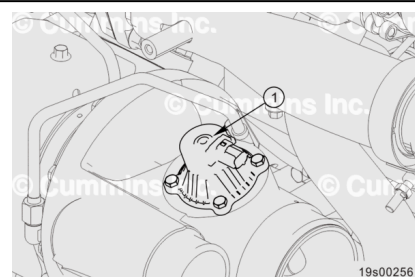

Initial Check

Disconnect the compressor recirculation valve from the engine wiring harness.

Measure the resistance between the compressor recirculation valve (+) pin and the compressor recirculation valve (-) pin. Use digital multimeter, Part Number 3164489, from Digital Multimeter Kit, Part Number 3400162, and test leads from Electrical Test Lead Kit, Part Number 5299367.

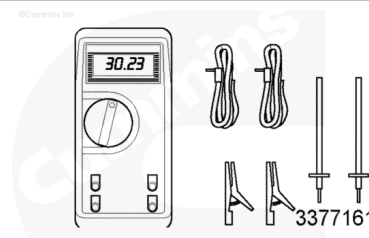

Resistance	
	Ohms
Min	14.7
Max	16.7

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.

Remove

Disconnect the engine harness connector from the compressor recirculation valve.


Remove the four capscrews alternately and the compressor recirculation valve from turbocharger.

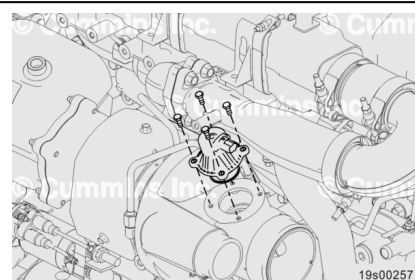


Inspect for Reuse

Inspect the compressor recirculation valve for oil contamination, damaged or exposed wires, bent or broken pins, damaged o-ring, and damaged connectors.

Replace the compressor recirculation valve if damage is found.

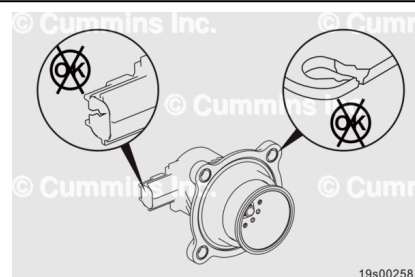

Measure the free state height of the valve cover head. Replace the compressor recirculation valve if the measurement does **not** meet the specification.

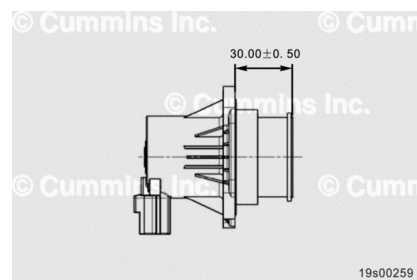

Free State Height of Valve Cover Head


mm		in
29.5	MIN	1.16
30.5	MAX	1.20

Install

Install the compressor recirculation valve and four capscrews.

Torque Value: 9 n·m [80 in-lb]

Connect the engine harness connector to the compressor recirculation valve.

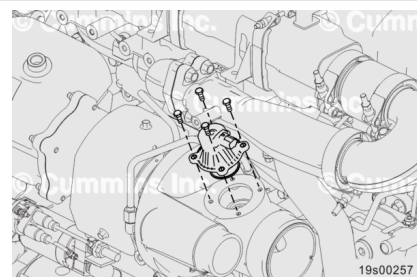

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine. Check for proper operation.

