

Trainings ▾


Drain

⚠ WARNING ⚠

To reduce the possibility of personal damage, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

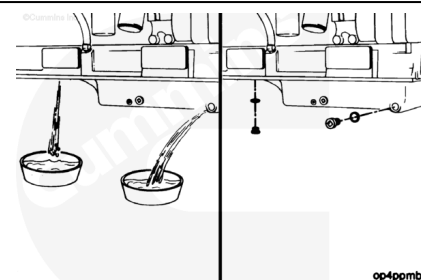

Note : Drain the engine oil when the temperature is approximately 60°C [140°F].

Remove the oil drain plug and o-ring or copper washers from the bottom of the oil sump and the oil pan adapter cover plate and drain the oil. Discard o-ring or copper washer.

Fill

Install the oil drain plugs and new o-ring or copper washers into the oil sump and oil pan adapter cover plate.

Tighten the oil drain plugs.

Torque Value:


Plugs with o-ring 54 n•m [40 ft-lb]

Torque Value:


Plugs with copper washers 100 n•m [74 ft-lb]

Fill the engine with clean 15W-40 oil. For oil pan capacities, Refer to Procedure 018-017


(/qs3/pubsys2/xml/en/procedures/18/18-018-017.html).

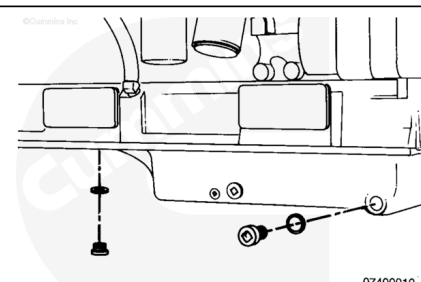

Check the oil level on the dipstick. The level **must** be to the “H” (high) mark on the dipstick.

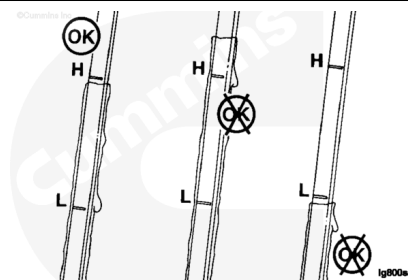

Operate the engine to normal operating temperature and check for oil leaks.

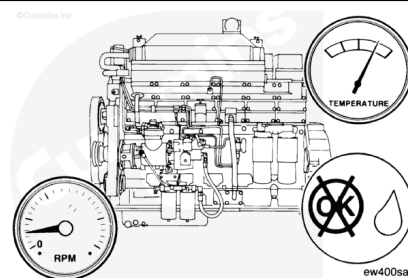

Shut the engine off and wait five to seven minutes to allow the oil to drain back into the oil pan.

Check the oil level.

Add oil as necessary to bring the level up to the “H” (high) mark on the dipstick.

