


Trainings ▾

Initial Check

Connect an electronic service tool to the vehicle datalink.

Turn the keyswitch to the ON position.


Monitor the ambient air pressure. If an ambient air pressure is less than or equal to 523 mm Hg [20.6 in Hg] and the current elevation is less than 10,000 feet, replace the ambient air pressure sensor.

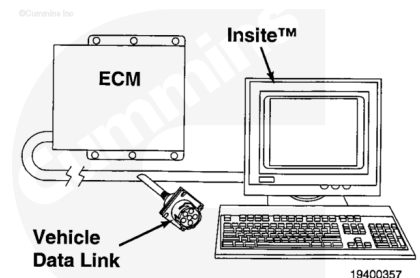

Remove

Lift up on the tab and disconnect the connector from the sensor.

Remove the mounting capscrews and sensor from the engine.

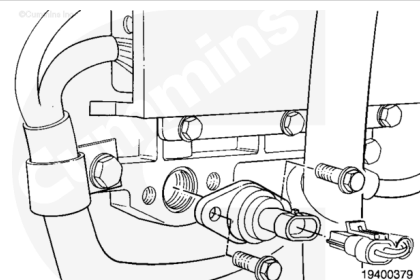


Install

Install a new sensor on the engine. Tighten the capscrews.

Torque Value: 23 n•m [204 in-lb]

Push the connectors together until they lock.

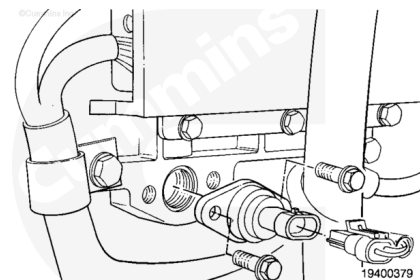

Last Modified: 20-Aug-2002
