


Trainings ▾

Remove


Make-up Solenoid Coil

Disconnect the make-up solenoid connector from the Centinel™ wiring harness.

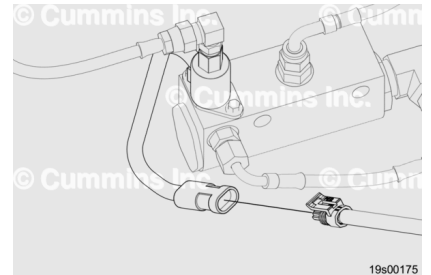

Remove the oil bypass hose (1) from the bypass tube elbow fitting (4).

While holding the solenoid nut (3) loosen and remove the elbow fitting (4) from the solenoid.

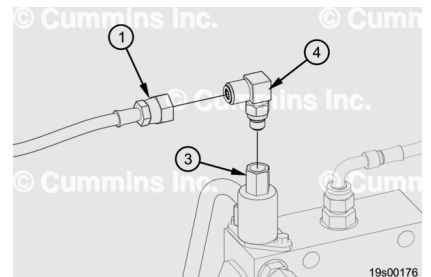

⚠ CAUTION ⚠


Do not bend the bypass oil tube. Damage to the tube and the control valve can result.

Loosen and remove the solenoid retaining capscrews (1).

Lift and remove the solenoid (2) from the valve.

Remove the o-ring (3) from the solenoid mounting.

Discard o-ring.

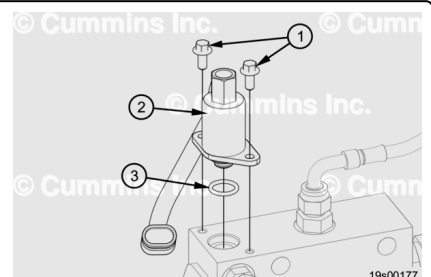


Install

Lubricate and install a new o-ring (3) on the solenoid.

Place the new solenoid (2) on the valve mounting.

Install the solenoid retaining capscrews (1) and tighten.


Torque Value: 5 n•m [44 in-lb]

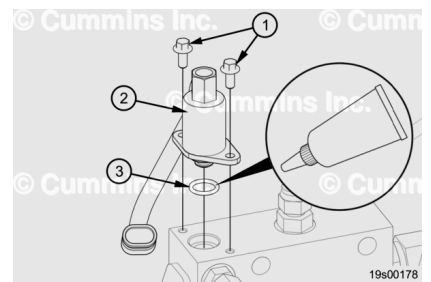

Note : Inspect the nylon washers and o-rings for damage. Replace if necessary.

⚠ CAUTION ⚠

Do not bend the bypass oil tube. Damage to the tube and the control valve can result.

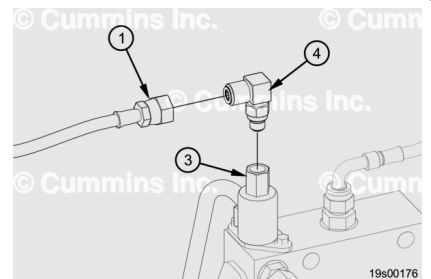

While holding the solenoid nut (3) install the elbow fitting (4) onto the solenoid.

Fit the oil bypass hose (1) onto the bypass tube elbow fitting (4).

Torque Value: 16 n•m [142 in-lb]

Connect the make-up solenoid connector to the Centinel™ wiring harness.

