


Trainings ▾

Remove


Clean the area around the actuator.

Disconnect the connector from the engine harness.

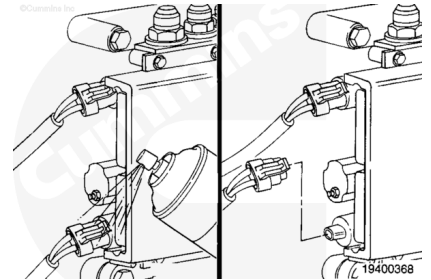

Remove the actuator with a ratchet and a 1 1/4-inch deep flange drive socket, Part Number 3823843.

Inspect the new actuator for o-rings.

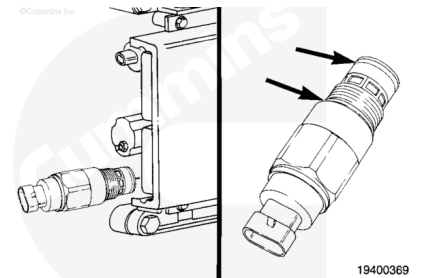

Install

Install a new actuator.

Torque Value: 25 n•m [221 in-lb]

Connect the engine harness to the actuator.

