


Trainings ▾

Remove


Clean the area around the timing actuator.

Disconnect the timing actuator connector from the engine harness.

Note : The front timing actuator is located on the fuel delivery housing. It is the second actuator from the front of the engine. The rear timing actuator is located on the fuel delivery housing. It is the second actuator from the rear of the engine.

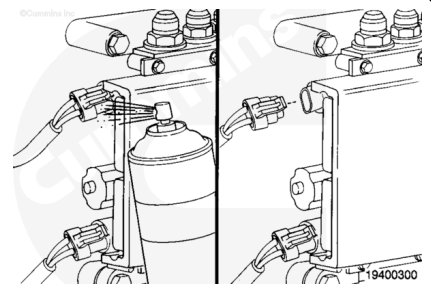

Remove the timing actuator.

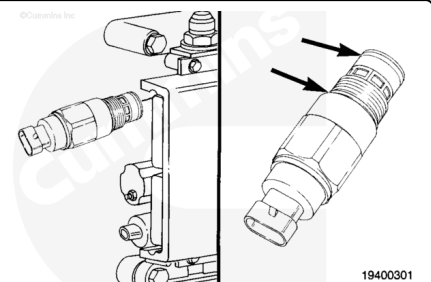

Install

Install a new timing actuator.

Torque Value: 5.4 n·m [44 in-lb]

Connect the engine harness to the timing actuator.

