


Fault Code: 422

Coolant Level Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 422 PID(P): P111 SPN: 111 FMI: 2 Lamp: Yellow SRT: 00-368	Voltage detected simultaneously on both the coolant level high and low signal pins 14 and 23 of the OEM interface harness, or no voltage detected on either pin.	No engine protection for coolant level.

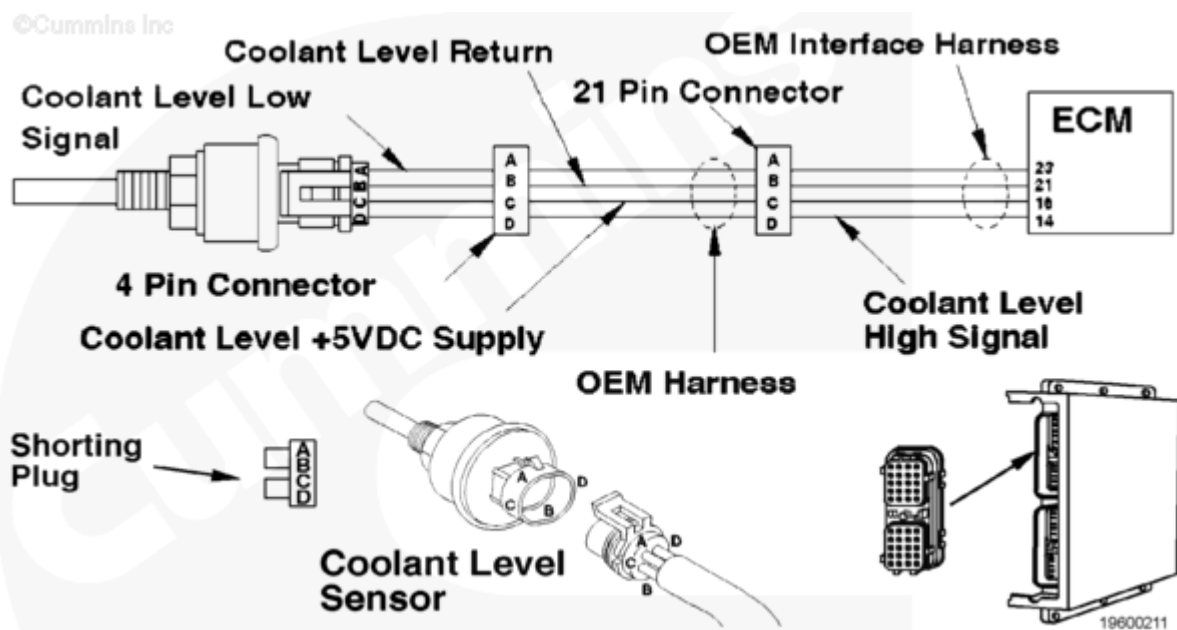

Coolant Level Sensor Circuit

Circuit Description

The coolant level sensor monitors the coolant level within the coolant system and passes information to the ECM through the OEM harness.

Component Location

The coolant level sensor is located in the radiator top tank or surge tank.

Shoptalk

This is an OEM-supplied component and will vary in sensor location.

- If a shorting plug is used in the coolant level circuit, verify that it is wired correctly.
- Inspect the wiring harness between the Weather-Pack four-way connector and the coolant level sensor for damage.
- Make sure the coolant level sensor is located in the middle of the tank rather than off to one side where the coolant level can change when the vehicle makes a turn.

There is an optional configuration of the coolant level sensor circuit that includes a water-in-fuel sensor. This optional configuration is illustrated above.

Refer to Troubleshooting Fault Code t05-422 (</qs3/pubsys2/xml/en/procedures/19/19-t05-422.html>)

Last Modified: 01-Mar-2011
