



Trainings ▾

General Information

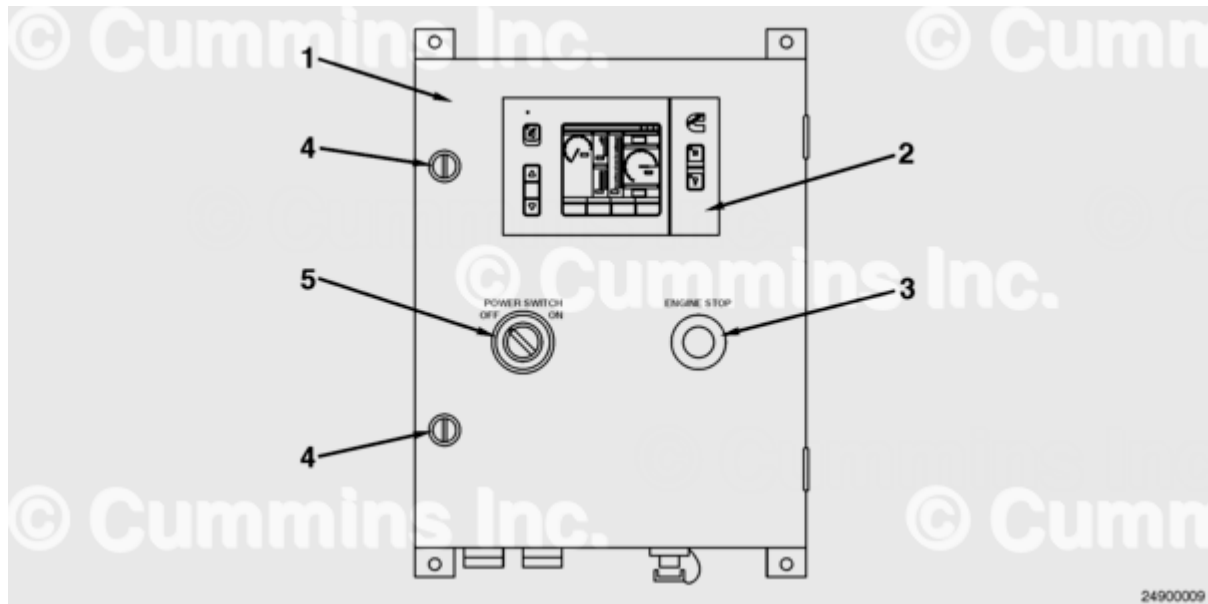

Customer Interface Box (C.I.B.)


1. Customer interface box (C.I.B.)
2. Diesel control unit 410(E)
3. Engine stop switch
4. Locking mechanism
5. Power switch.

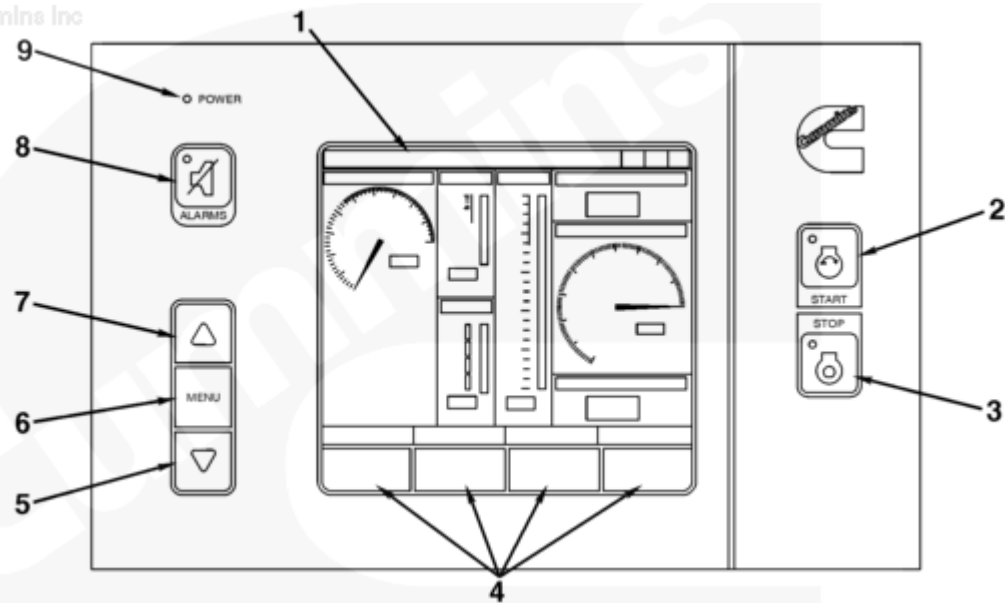

17800173

Diesel Control Unit 410 - Front View


1. Display unit
2. Start button
3. Stop button
4. Soft buttons
5. Down arrow button
6. Menu button
7. Up arrow button
8. Alarm button
9. Power light emitting diode.

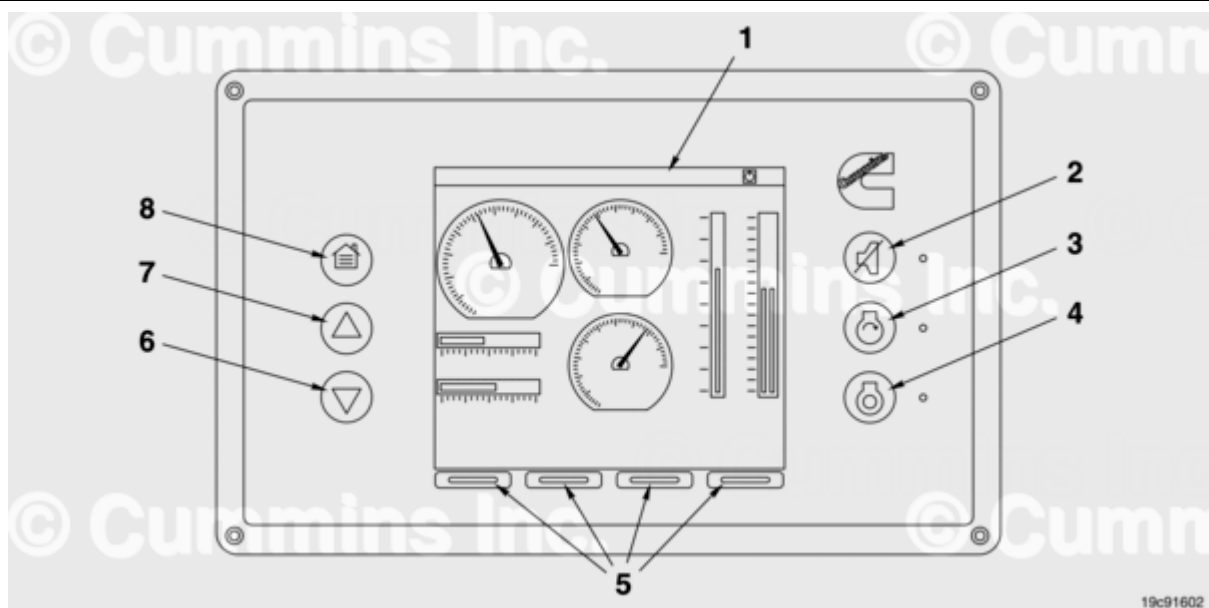


19c91602

Diesel Control Unit 410E - Front View

1. Display unit
2. Alarm button
3. Start button

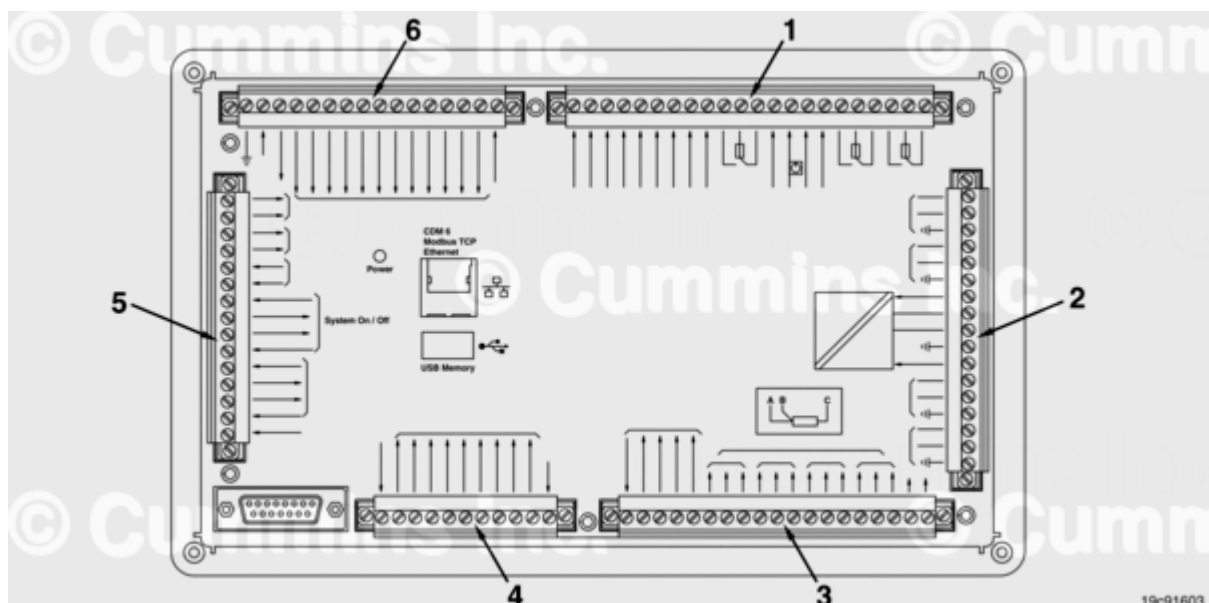


1. Configurable output signals for relays and alarms
2. Com 1, 2, 3, 4, and Modbus™ signal inputs
3. Sensor input signals
4. 1 through 8 switch inputs
5. Power supply to the diesel control unit
6. Critical signal inputs to the diesel control unit.

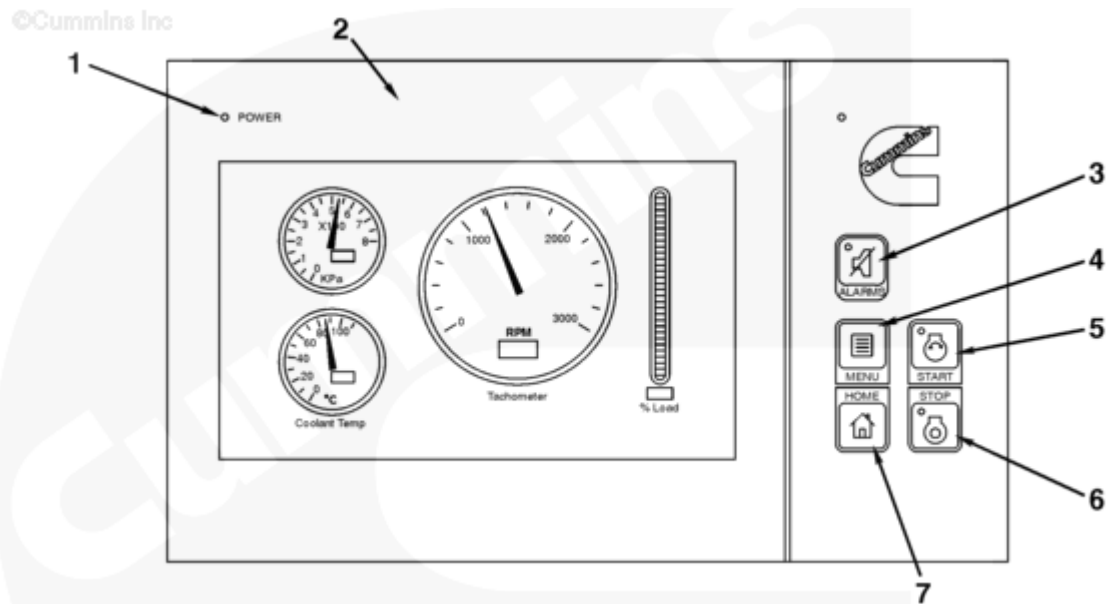


Remote Panel 410 - Front View

1. Power light emitting diode
2. Display panel
3. Alarm button
4. Menu button
5. Start button
6. Stop button
7. Home button.

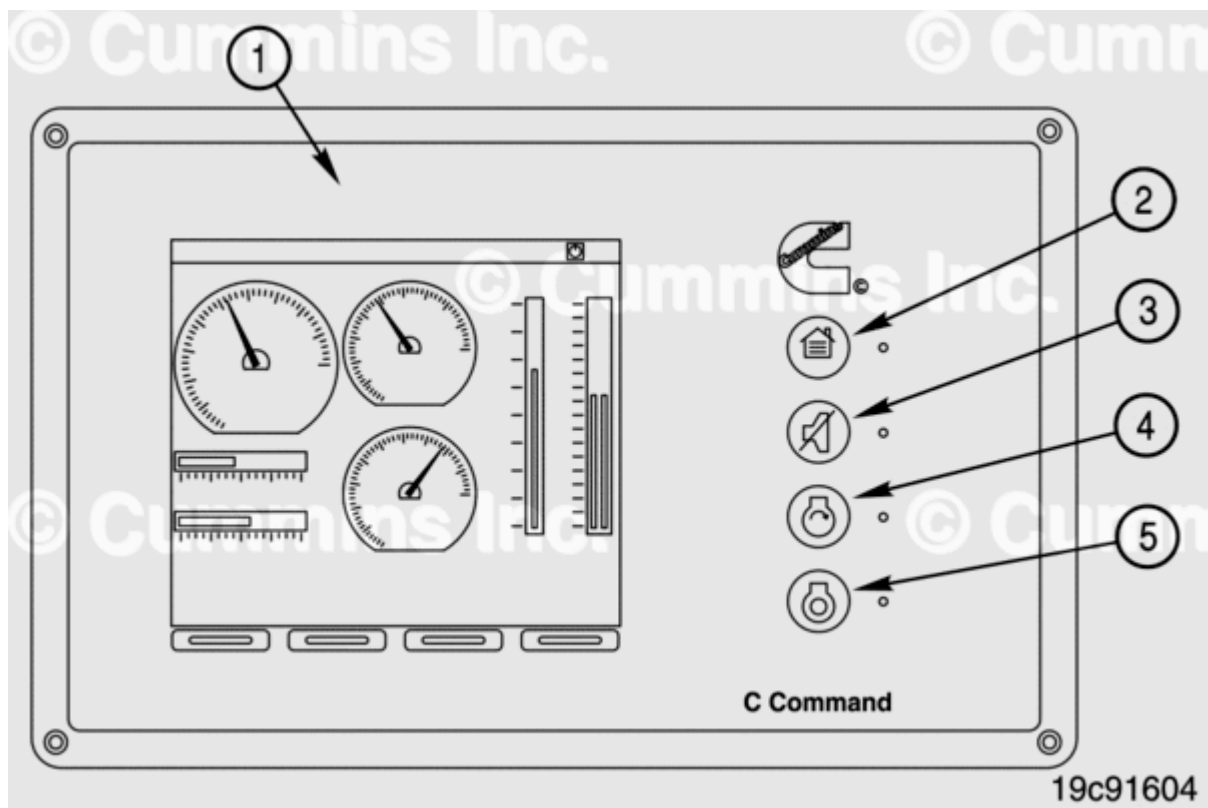


Remote Panel 410E - Front View


1. Display panel
2. Home button
3. Alarm button
4. Start button
5. Stop button.

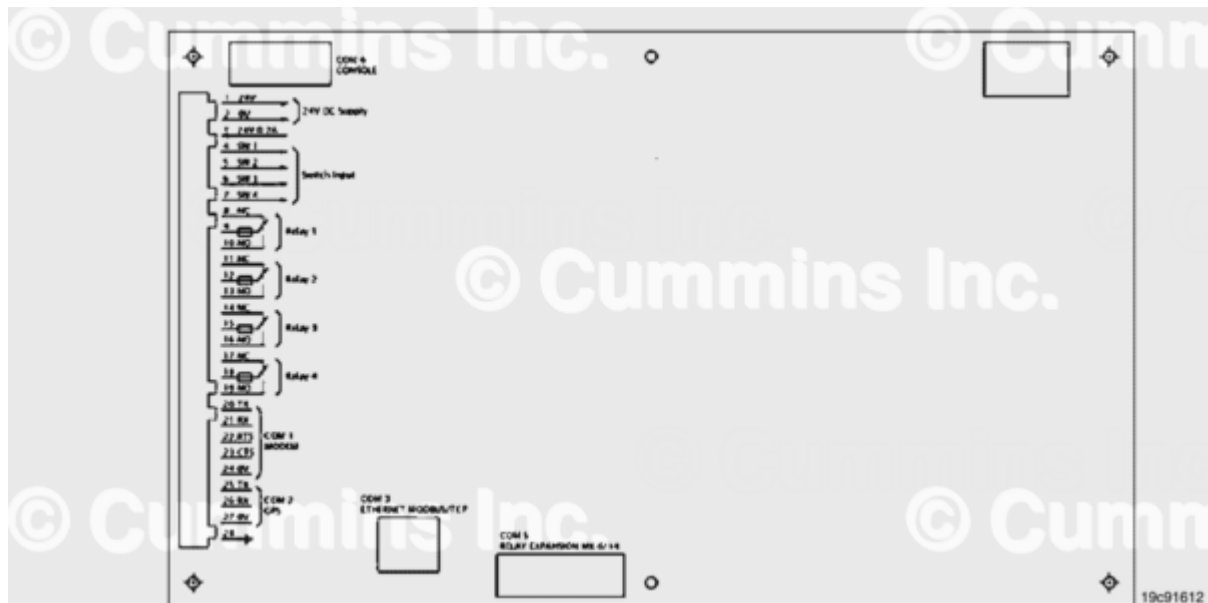

Remote Panel 410 - Rear View

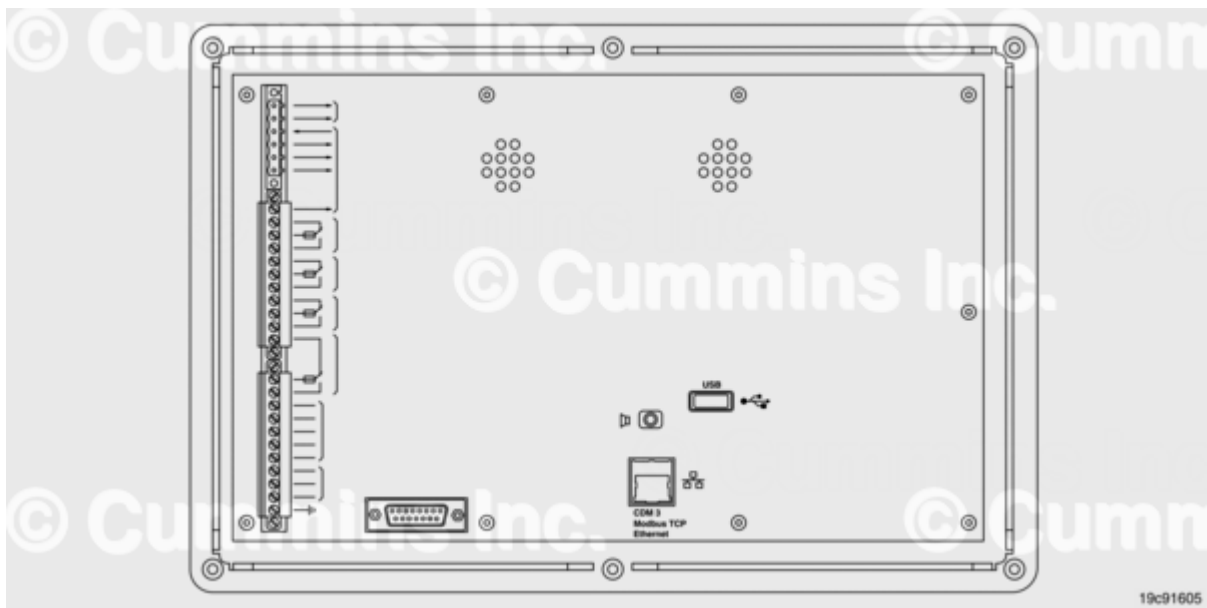


Remote Panel 410E - Rear View

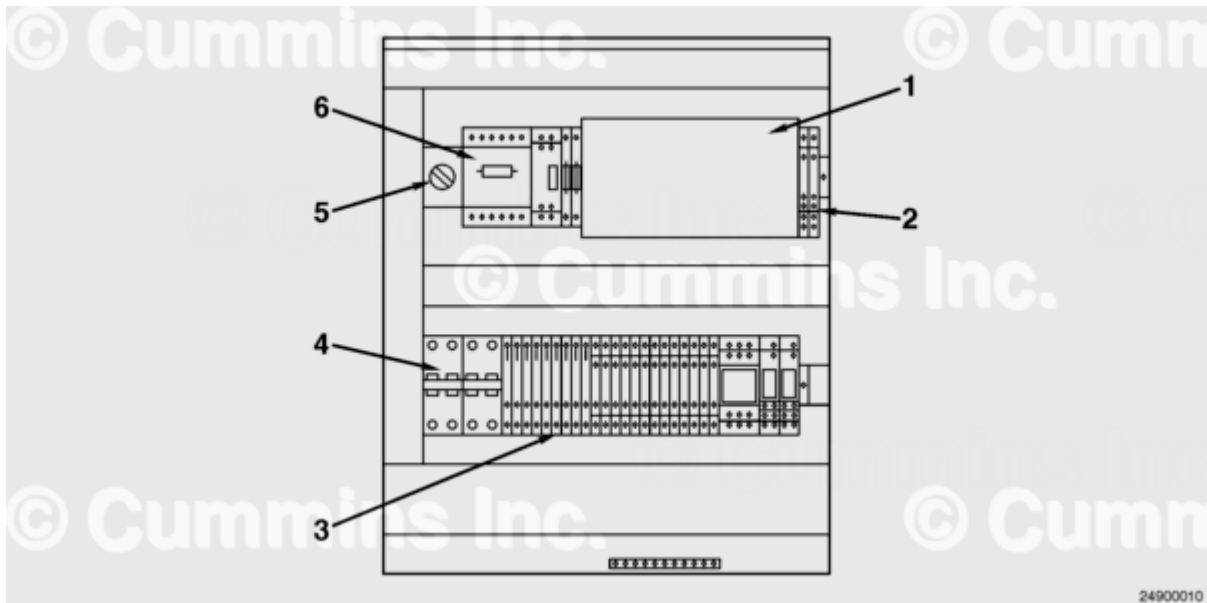

Customer Interface Box - Inside View

1. Shutdown unit
2. Ethernet switch
3. Terminal strip
4. Circuit breakers
5. Idle/rated switch
6. Trim potentiometers.

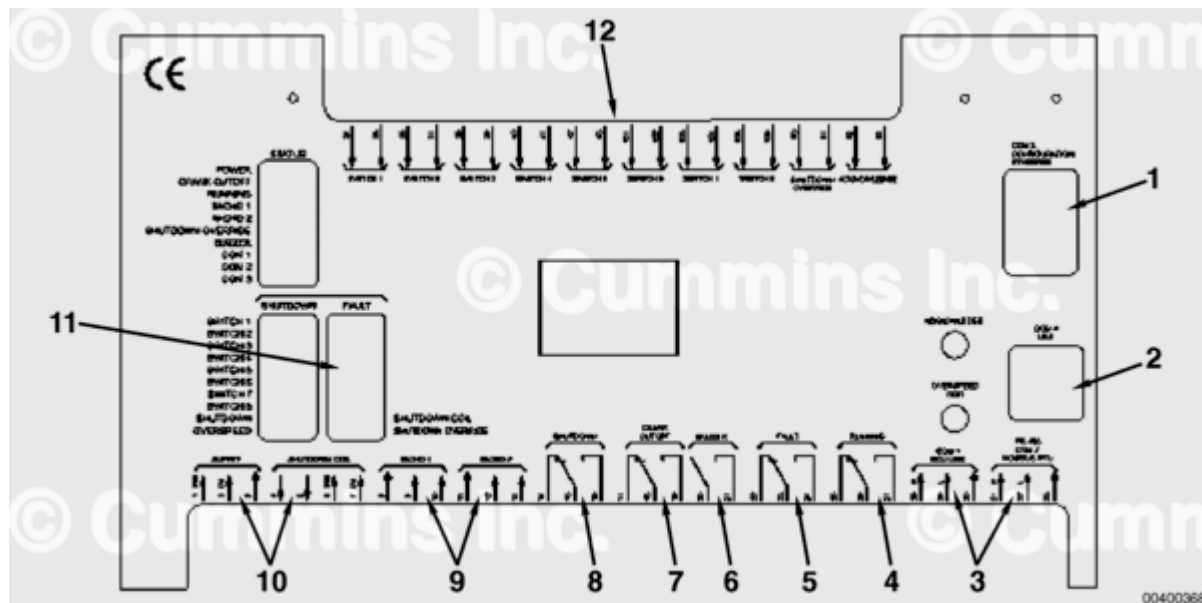

Shutdown Unit - Front View

1. Ethernet connection
2. Com 4 USB connection
3. Communication link to the diesel control unit
4. Running relay (configurable)
5. Fault relay (configurable)
6. Buzzer relay (configurable)
7. Engine crank shut off (configurable)
8. Shutdown relay
9. Engine speed input signals
10. Power supply for shutdown unit
11. Shutdown fault switches
12. Channel input signals for sensors.