


Trainings ▾

Install


Use Lubriplate™ 105, Part Number 3163086, Part Number 3163087 or equivalent, to coat the upper thrust bearings.

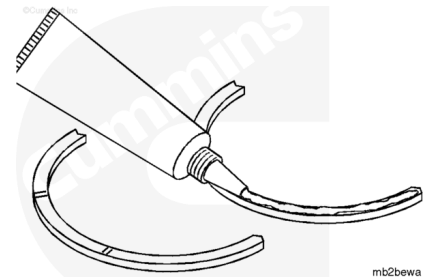

Push the crankshaft toward the rear of the engine to install the rear thrust bearing, and to the front of the engine to install the front thrust bearing.

Install the upper thrust bearings in the number four main bearing saddle.


The grooves **must** be toward the crankshaft.

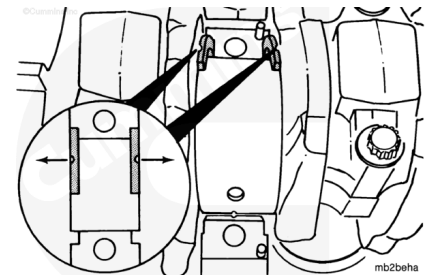

Use Lubriplate™ 105, Part Number 3163086, Part Number 3163087 or equivalent, to coat the lower thrust bearings.


Install the lower thrust bearings in the number four main bearing cap as shown.

The grooves of the thrust bearing **must** be toward the crankshaft.

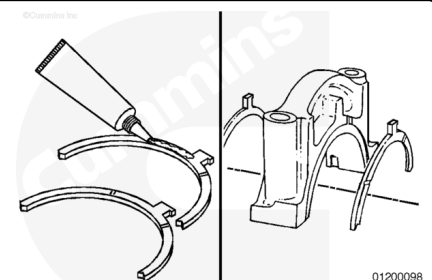


Use clean 15W-40 engine oil to coat the capscrew threads and on both sides of the washers.

Drain the excess oil from the capscrews before installing them in the cylinder block.

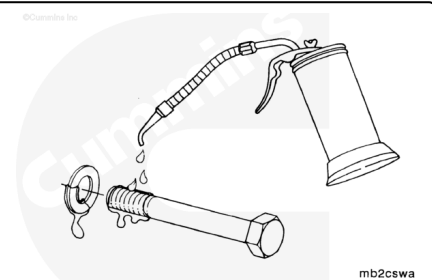


⚠ CAUTION ⚠

To avoid the possibility of damage to the cylinder block and main bearing cap, the number four main bearing cap must be aligned with the dowel pins in the bearing saddle when the capscrews are tightened.

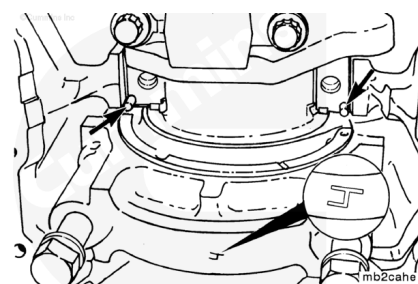



The main bearing caps are numbered one through seven from front to rear in the cylinder block. The caps **must** be installed so the number on the cap matches the bearing saddle in the block. The lock tangs in the main bearing saddle and bearing cap **must** be on the same side.

Install the main bearing caps.

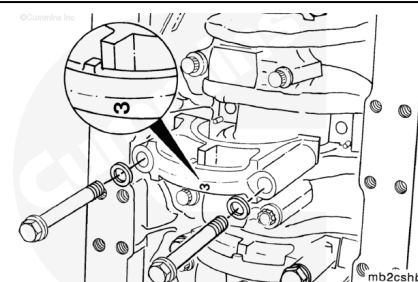


⚠ CAUTION ⚠

To avoid the possibility of damage to the main bearing cap and bearings, do not hit the main bearing cap with a hammer.

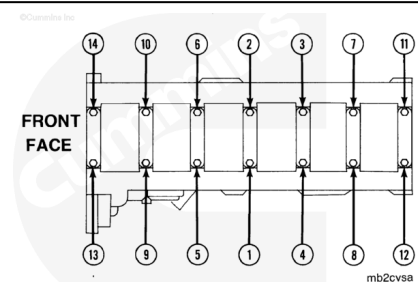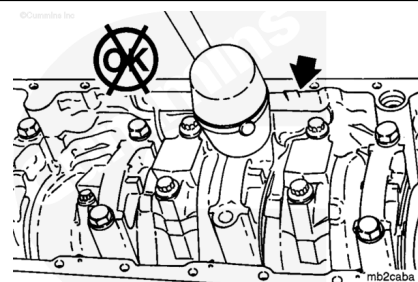

Use a dial indicator to measure the crankshaft end clearance.

Crankshaft End Clearance		
mm		in
0.10	MIN	0.004
0.56	MAX	0.022

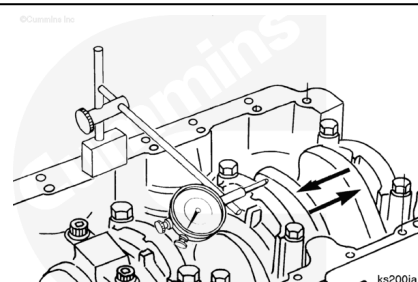

If the end clearance is **not** within the specifications, inspect the main bearing cap and thrust bearing surfaces in the cylinder block.

