


Trainings ▾

Remove

⚠ CAUTION ⚠


Support the camshaft gear on the center hub when pressing it off the camshaft. Failure to do so can result in damage to the gear.

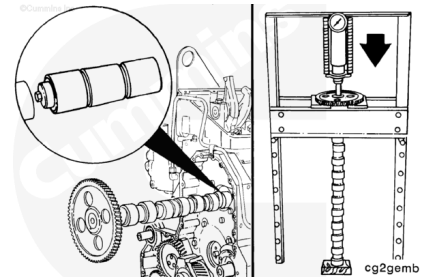

Remove the camshaft. Refer to Procedure 001-008 (</qs3/pubsys2/xml/en/procedures/35/35-001-008-tr.html>).
Install the camshaft and gear assembly in a hydraulic press.

Press the camshaft from the gear.

Note : If the camshaft key is marked with an arrow, record the direction the arrow is pointed.

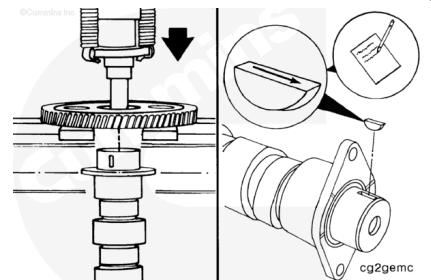

Remove the camshaft key.

Remove the thrust plate.

