


Trainings ▾

Remove

On the exhaust side of the engine, remove the four capscrews (1), the dipstick tube bracket and gasket (2).

Remove the four capscrews (2), the hand hole cover and gasket.

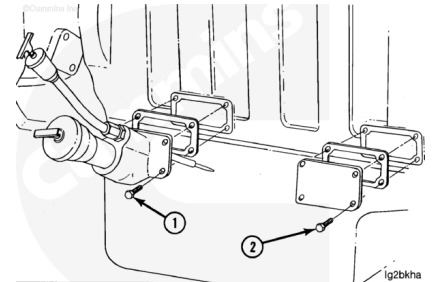

On the fuel pump side of the engine, remove the four capscrews, the cover and the gasket.

