


Trainings ▾

Remove

Three idler gear assemblies are used:


- Water pump idler gear (1)
- Camshaft idler gear (2)
- Hydraulic pump idler gear (3).

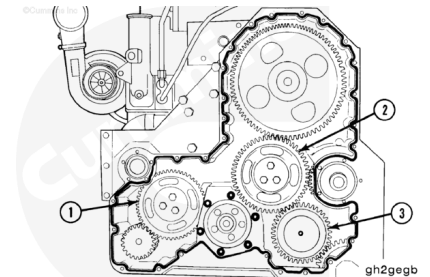

SAE 'A' and SAE 'B' Removal

To remove the hydraulic drive idler gear assembly, remove:

- Mounting spacer (1)
- Rectangular seal (2)
- The three twelve-point capscrews
- Gear retainer (3)
- Rectangular seal (4)
- Front thrust bearing (5)
- Idler gear (6)
- Rear thrust bearing (7)
- Idler gear shaft (8).

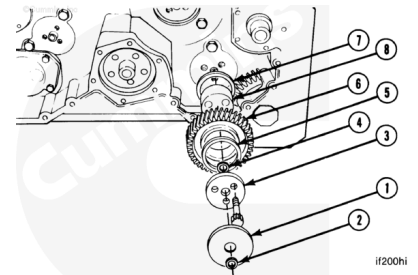


Note : SAE "A" drives do not use a rectangular seal (4) on the rear surface of the gear retainer.


SAE 'B-B' Removal

To remove SAE B-B hydraulic drive idler gear assembly, remove:

- Mounting Spacer (1)
- Tapered Roller Bearing (2)
- Gear Drive (3)
- Tapered Roller Bearing (4)
- Shim(s) (5)
- Idler Gear Shaft (6)
- Mounting Spacer (7)
- Rectangular Seal (8).

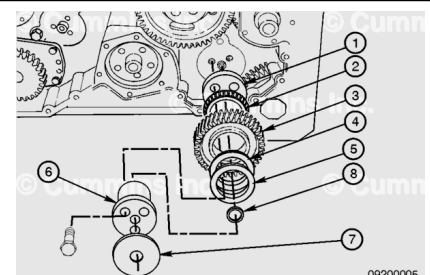

Mark or tag the individual pieces of the idler gear assembly and attach them together.

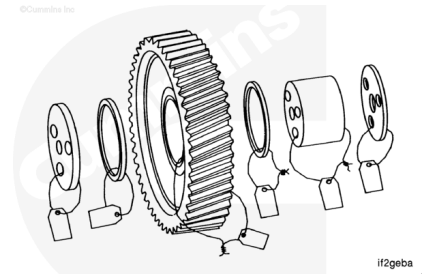

Last Modified: 23-Jan-2009
