


Trainings ▾

Failure Analysis Inspection

To check the ring gap, install the piston rings into the cylinder liner in which they were used, below the ring reversal area.

Use the top part of the piston to position the ring in the liner.

Use a feeler gauge to inspect the ring end gap.

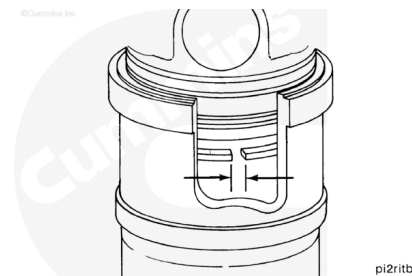

Piston Ring Gap			
	mm		in
Top	0.35	MIN	0.014
	0.60	MAX	0.024
Intermediate	0.76	MIN	0.030
	1.14	MAX	0.045
Oil	0.26	MIN	0.010
	0.64	MAX	0.025

If failure resulted in coolant, oil, excessive fuel, or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Refer to Procedure 014-013 in Section 14. (</qs3/pubsys2/xml/en/procedures/101/101-014-013.html>)