


Trainings ▾

Remove

With EGR

Remove the water header plate and gasket.

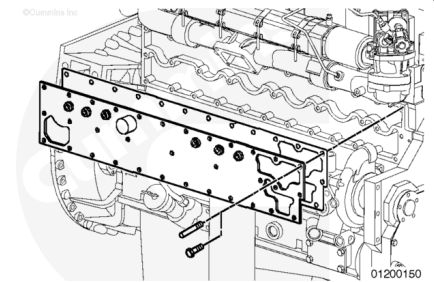

Without EGR

Remove the water header plate (7) and gasket (8).

