


Trainings ▾

Install


If the gasket was **not** damaged, it can be used again. If the gasket was damaged, it **must** be discarded and a new one used.

Install the gasket on the cover.

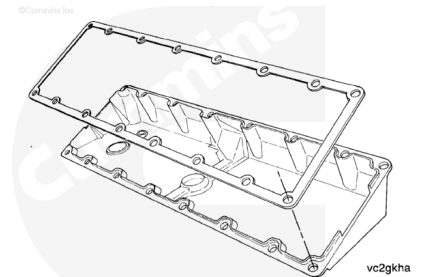


Install the cover on the rocker lever housing.

Install the 16 isolators, spacers, and capscrews in the cover.

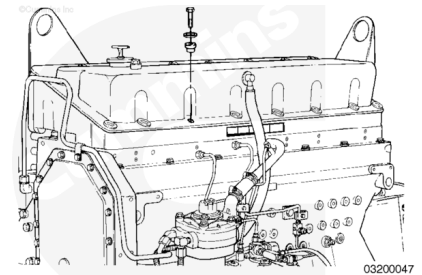

Tighten the capscrews in the sequence shown.

Torque Value: 15 n•m [130 in-lb]

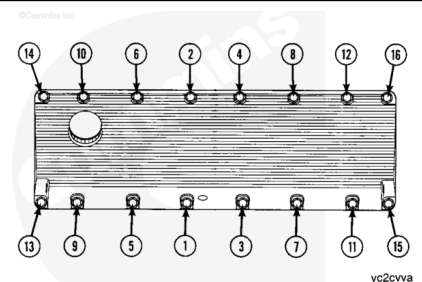

Install the hose on the crankcase breather.

Install the air piping to the intake manifold. Refer to the manufacturer's specifications for the correct torque values.

