



Trainings ▾

Remove

If the check valve in the gear pump return elbow stays open or closed, replace the elbow.

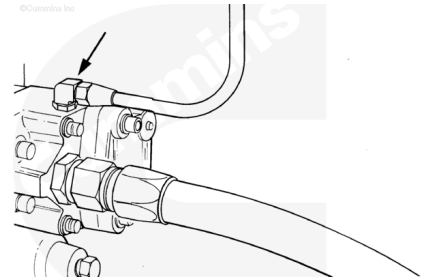


Check the elbow threads. Do **not** install an elbow that has straight machine threads in a hole that has a pipe tap thread. A gear pump that has a straight thread will have a 19-mm [0.750-in] spotface in the valve area. A gear pump that has a pipe tap thread will have a 16-mm [0.625-in] spotface or no spotface.

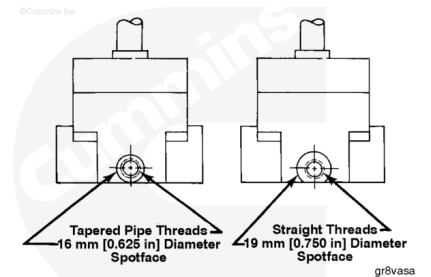

Remove the drain line.

Remove the check valve elbow.

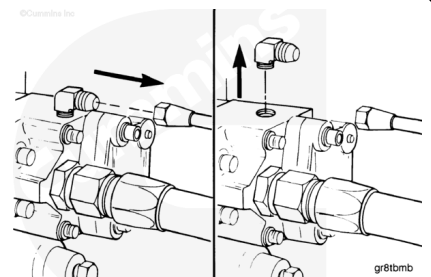


Install

Install the check valve elbow.

- If the check valve elbow has machine threads to the maximum thread depth, turn the elbow out until it is pointed toward the drain line. Tighten the jam nut.

Torque Value: 6 n•m [50 in-lb]

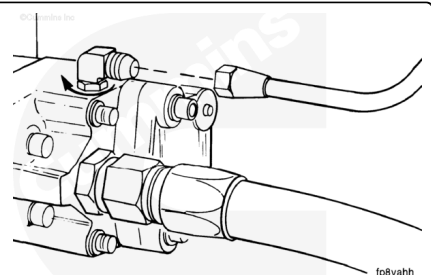

- If the check valve has a pipe thread, install the elbow until it is tight and pointed toward the drain line.

Install the drain line.

