


Trainings ▾

Initial Check

To check for a sticking pressure regulator, install a pressure gauge on the Compuchek™ fitting in the side of the fuel shutoff valve.

Start cranking the engine.

The pressure gauge **must** start moving immediately and increase rapidly until the engine fires (approximately 172 kPa [25 psi]). This can take 3 to 5 seconds.

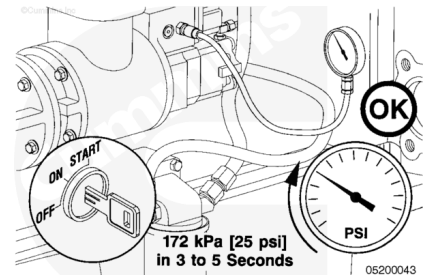

If the pressure gauge does **not** move or increases very slowly for more than 6 seconds, the regulator plunger is stuck open and will **not** let pressure build up quickly for a normal start. This can be caused by dirt, rust, or burrs on the plunger, or burrs on the plunger bore.

If the plunger is sticking, the gear pump **must** be replaced with a new or ReCon® unit.

