


Trainings ▾

Remove


Disconnect the injector wires. Number the injector electrical connections as they are removed. They **must** be connected to the same cylinder when they are installed.

Remove the clamp capscrew and injector hold-down clamp.

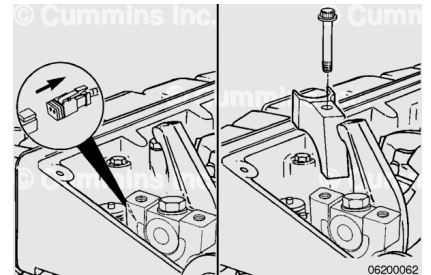

Remove the injectors with injector tool, Part Number 3823579.

Insert the pin of the tool into the hole provided in the body of the injector.

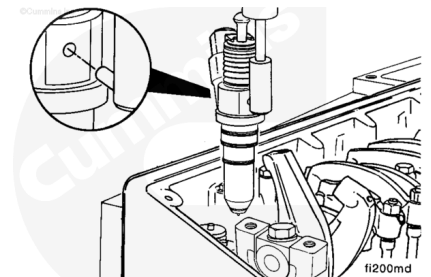

If injector puller, Part Number 3823579, is **not** available, carefully use a pry bar.

Pry upward on the injector against the cylinder head.

