



## Trainings ▾

### Remove


Remove the two oil cooler water connection retainer mounting flange capscrews.

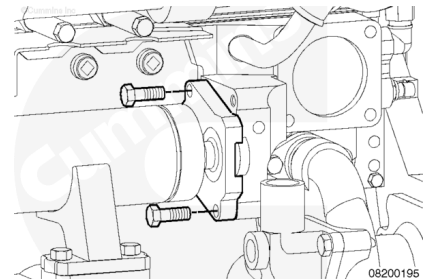

If the engine is built with four oil cooler thermostat housing flange capscrews, remove the four oil cooler thermostat housing flange capscrews.

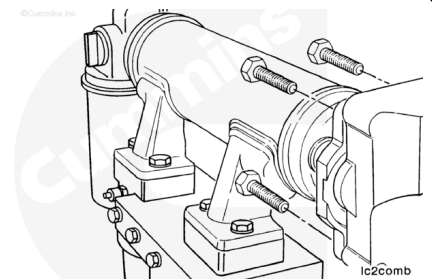


Remove the four oil cooler mounting capscrews, oil cooler, and gaskets.

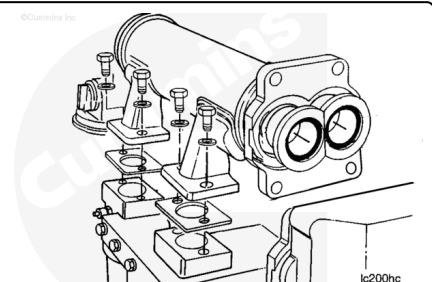


Remove the oil cooler water inlet and outlet tubes and mounting flange.

Remove and discard the gaskets and o-rings.

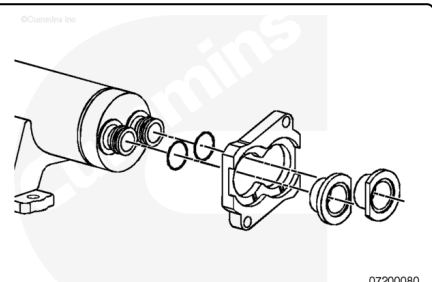

Do **not** attempt to repair a damaged oil cooler. A damaged oil cooler **must** be replaced.

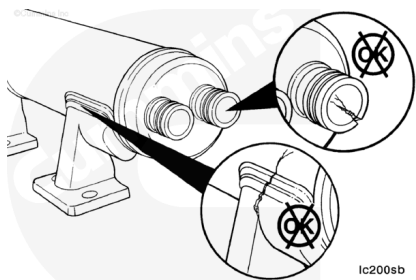

---

**Last Modified: 25-Jun-2013**

---