

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

- Drain the lubricating oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/35/35-007-037-tr.html>)
- Remove the oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/101/101-007-025-tr.html>)
- Remove the main oil pressure regulator. Refer to Procedure 007-029 in Section 7. (</qs3/pubsys2/xml/en/procedures/35/35-007-029-tr.html>)

©Cummins Inc.




ck800wa

Remove

Remove the viscosity sensor with a 7/16-inch socket, an extension, and ratchet.

©Cummins Inc.

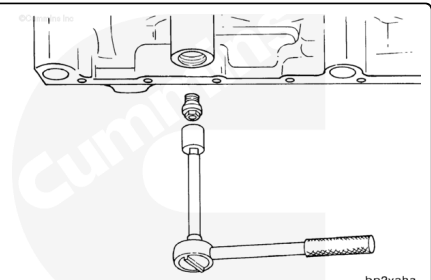

bp2vaha

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

If the viscosity sensor is plugged or contains debris, it **must** be cleaned.


Use solvent and compressed air to remove the debris. If the viscosity sensor can **not** be cleaned of all debris, it **must** be replaced.

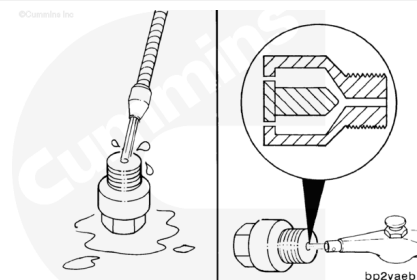

Install

Install the viscosity sensor into the cylinder block.


Torque Value: 24 n·m [18 ft·lb]

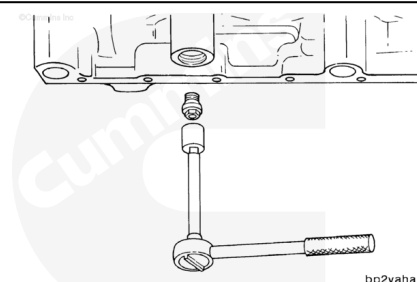

Finishing Steps

⚠ CAUTION ⚠

Engine oil pressure must be indicated on the gauge within 15 seconds after starting. If oil pressure is not registered within 15 seconds, shut off the engine immediately to avoid engine damage. Confirm the correct oil level in the oil pan.

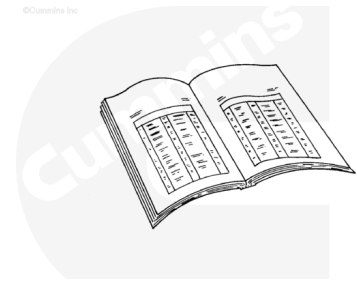

ck800wa

- Install the main oil pressure regulator. Refer to Procedure 007-029 in Section 7.
(/qs3/pubsys2/xml/en/procedures/35/35-007-029-tr.html)
- Install the oil pan. Refer to Procedure 007-025 in Section 7. (/qs3/pubsys2/xml/en/procedures/101/101-007-025-tr.html)
- Fill the engine with clean 15W-40 oil. Refer to Procedure 007-037 in Section 7.
(/qs3/pubsys2/xml/en/procedures/35/35-007-037-tr.html)
- Operate the engine at idle speed for 3 minutes to inspect for leaks.