


Trainings ▾

Remove

Loosen the fan idler pulley shaft locknut.

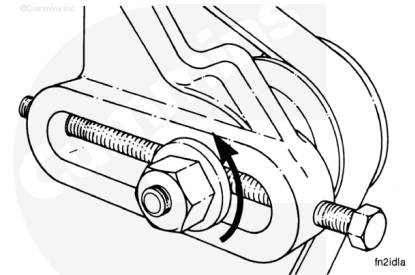

Turn the adjusting screw **counterclockwise** to release the belt tension.

Move the fan idler pulley and fan pulley centers as close as possible. The belt can then be removed without excessive force.

