

Trainings ▾

General Information

Change the coolant filter at every oil and filter change interval unless the supplemental coolant additive (SCA) level is over three units. See Supplemental Coolant Additive - Maintenance check in this section.

Note : The SCA level must be tested every six months.

The correct coolant filter to be used is determined by the total cooling system capacity and other operational factors. Use the following procedure for correct filter selection. Refer to Procedure 018-004 in Section V.


(/qs3/pubsys2/xml/en/procedures/101/101-018-004-om-ind.html)



Remove


⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

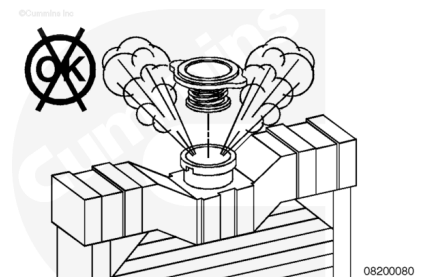


Remove the cooling system pressure cap.

Turn the valve on the coolant filter head to the OFF position.

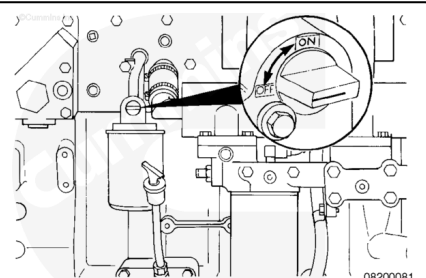

⚠ WARNING ⚠

A small amount of coolant can leak when servicing the coolant filter with the shutoff valve in the OFF position. To reduce the possibility of personal injury, avoid contact with hot coolant.

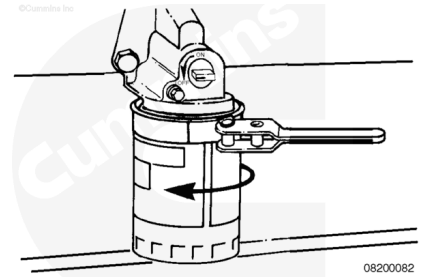

Remove and discard the coolant filter.

Use a lint-free cloth to clean the coolant filter head gasket surface.

Install


⚠ CAUTION ⚠

If the filter canister is damaged in any way, do not use it. Dents or scrapes can lead to a rupture or premature failure of the filter.



Apply a thin film of clean engine oil to the gasket sealing surface before installing the new coolant filter.


Install the new filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

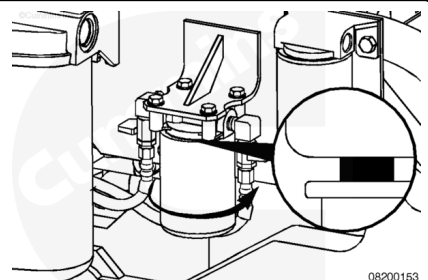

⚠ CAUTION ⚠


Mechanical overtightening can distort the filter threads or damage the filter head.

Tighten the filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn, or as specified by the filter manufacturer.

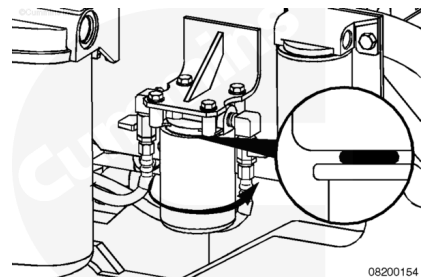

⚠ CAUTION ⚠

The valve(s) must be in the ON position to reduce the possibility of engine damage.

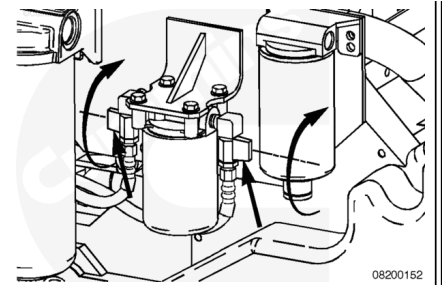

Turn the valve on the filter head to the ON position, and install the coolant system pressure cap.

Operate the engine and check for leaks.

After the air has been purged from the system, check the coolant level again.

