

Trainings ▾

Install


Install a new o-ring on the valve.

Lubricate the o-ring with a film of antiseize compound.

Install the valve in the filter head.


Tighten the capscrew.

Torque Value: 10 n•m [90 in-lb]

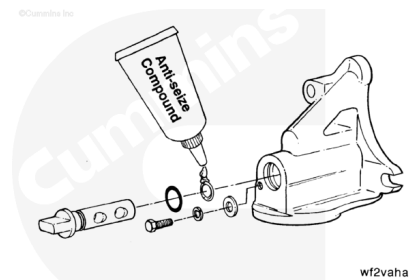

Use clean 15W-40 oil to lubricate the two new o-rings.

Install the o-rings on the filter head.

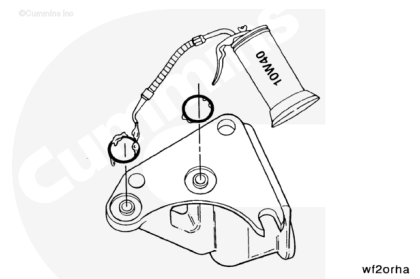

⚠ CAUTION ⚠

The control valve must be in the ON position to prevent engine damage.

Install the filter head and filter, if removed.

Tighten the capscrews.

Torque Value: 54 n•m [40 ft-lb]

Turn the control valve to the ON position.

