


Trainings ▾

Remove

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the coolant system pressure cap. Heated coolant spray or steam can cause personal injury.

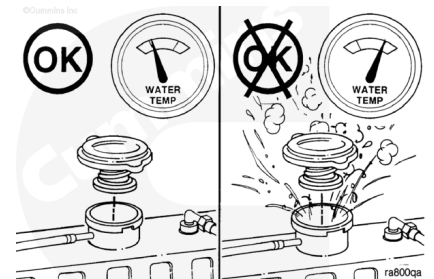

Remove the pressure cap when the engine is cool.

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

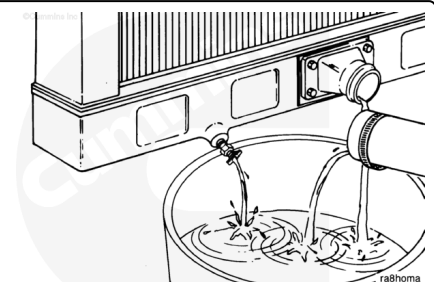


Drain the cooling system as follows:


- Open the radiator draincock.
- Remove the lower radiator hose.

Remove the upper coolant hose from the thermostat housing.


Loosen the coolant bypass hose clamps.

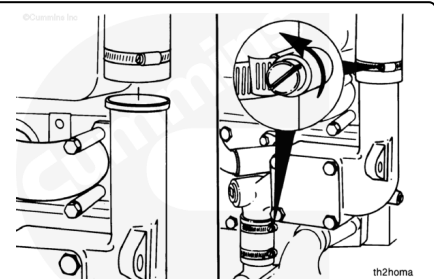

Remove the four thermostat housing mounting capscrews and the thermostat housing.

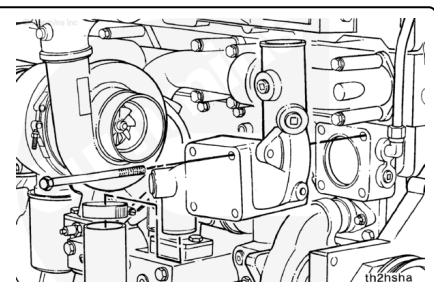


Remove the thermostat from the housing.

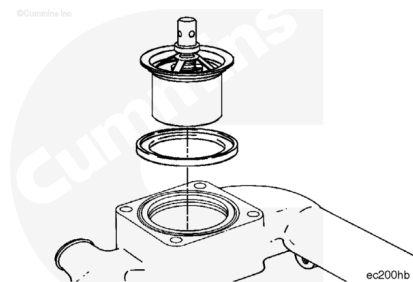

Install

Install the thermostat in the housing.

Install a new o-ring seal in the groove on the thermostat housing mounting surface.

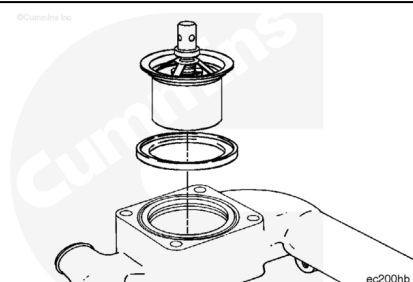


Install the hose on the thermostat housing bypass outlet.

Install the thermostat housing and four mounting capscrews.

Tighten the mounting capscrews.


Torque Value: 54 n•m [40 ft-lb]

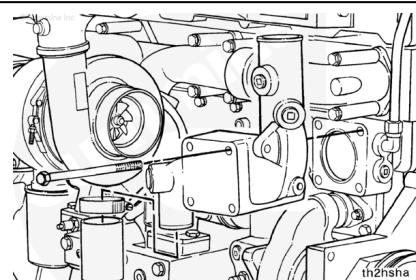

Install the upper coolant hose to the thermostat housing outlet.

Tighten the coolant bypass hose clamps.


Torque Value: 5 n•m [44 in-lb]

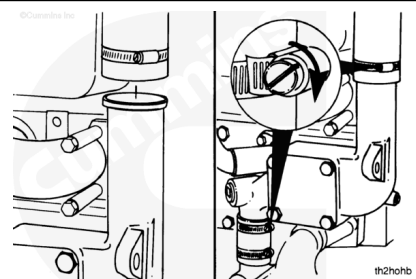

Close the cooling system draincock, and install the lower coolant hose.

Tighten the hose clamp.

Refer to the OEM's specifications for the correct torque value.

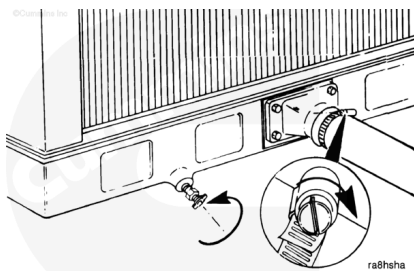

The correct concentration of coolant additives **must** be used in the cooling system. Refer to Procedure 018-004 in Section V. (</qs3/pubsys2/xml/en/procedures/101/101-018-004-om-ind.html>)

Fill the cooling system. Refer to Procedure 008-018 in Section 6. (</qs3/pubsys2/xml/en/procedures/35/35-008-018-om-ind.html>)

Operate the engine until it reaches 80°C [180°F], and check for coolant leaks.

