

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the electrical connections, negative (-) cable first, from the batteries. Refer to the OEM service manual.
- Disconnect the fan clutch connector on the base harness from the fan clutch.
- Remove the fan from the engine. Refer to the OEM service manual.
- Remove the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html>)


©Cummins Inc.



ck800wa

Remove

Remove the fan hub, clutch and capscrews from the engine.

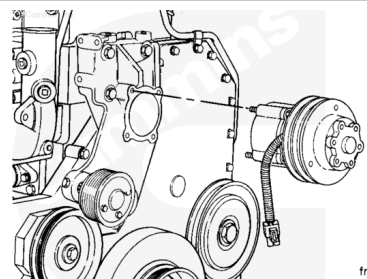


fn200he


Inspect for Reuse

This type of fan clutch is activated when 12-VDC from the vehicle electrical system is applied.

The clutch will disengage when 0-VDC is applied.

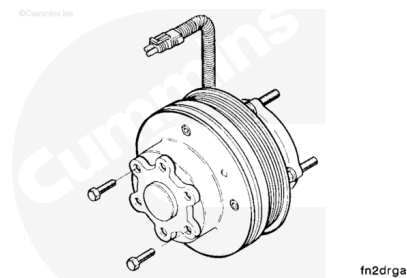


If the fan does **not** operate within the temperature range on the coolant temperature sensor (1), the fan clutch and the controls **must** be checked.

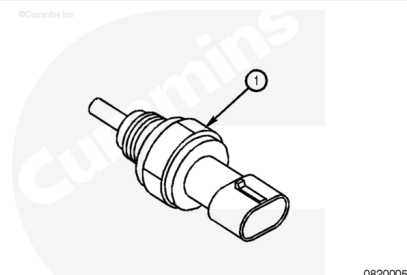

Inspect wires and harnesses to make sure none are broken or shorted. Replace harnesses or wires that are broken. Refer to Procedure 008-069 in Section 8.


(/qs3/pubsys2/xml/en/procedures/35/35-008-069-tr.html)

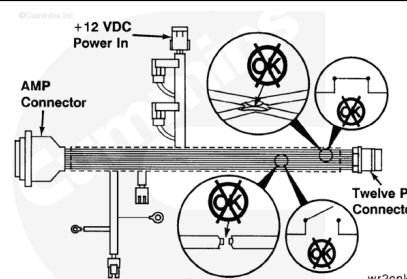

The Cummins® electric fan clutch contains an electromagnetic coil. If the fan is **not** operating and all electrical circuits are OK, the coil possibly has an open circuit.

Measure the continuity across the isolated coil. Connect one multimeter lead to pin A in the fan clutch connector. Connect the other lead to pin B.


The resistance **must** be within 6-10 ohms. If the resistance is **not** within this range, replace the fan clutch.

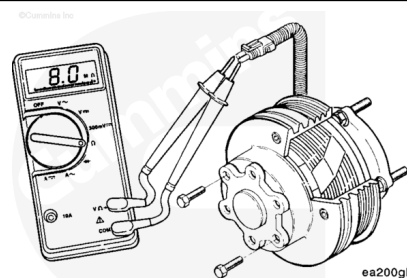

Install

Install the fan hub, clutch, and capscrews. Tighten the capscrews alternately and evenly.

Torque Value: 47 n•m [35 ft-lb]

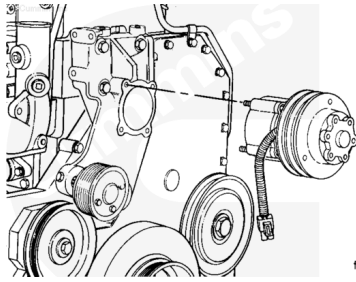


fn200he

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

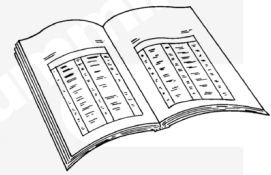

ck800wa

- Install the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html>)
- Install the fan from the engine. Refer to the OEM service manual.
- Connect the fan clutch connector on the base harness to the fan clutch.
- Connect the batteries, negative (-) cable last. Refer to the OEM service manual.
- Operate the engine and check for proper operation.