


Trainings ▾


Maintenance Check

Remove the fan drive belt. Refer to Procedure 008-002 in Section A. (</qs3/pubsys2/xml/en/procedures/35/35-008-002-om-ind.html>)

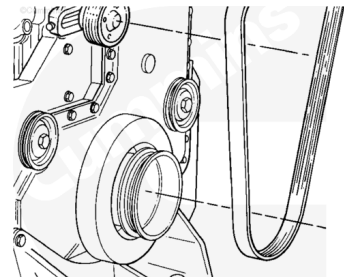


Check the idler pulley for:

- Freedom of rotation
- Cracked, chipped, or broken pulley grooves.

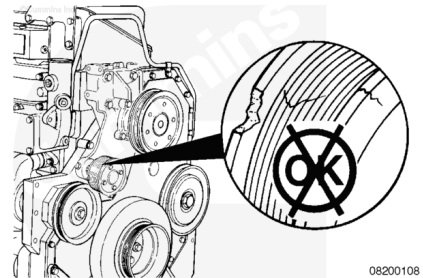

Measure the pulley end clearance.

Idler Pulley End Clearance		
mm		in
0.025	MIN	0.0010
0.250	MAX	0.0100

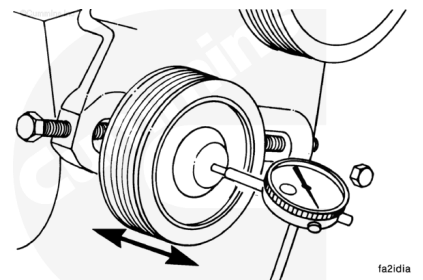

Replace or rebuild the idler pulley if the end clearance is **not** within these specifications.

Contact a Cummins® Authorized Repair Location.

