


Trainings ▾

Remove

Remove the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html>)


Remove the fan and fan clutch assembly.

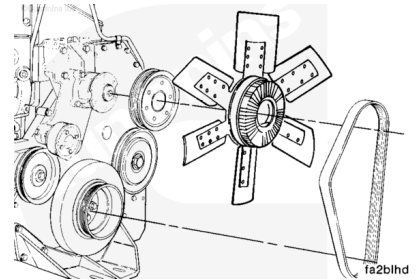


Inspect for Reuse

⚠ WARNING ⚠

Do not rotate the engine by pulling or prying the fan. The fan blade(s) can be damaged, causing the fan to fail, which can cause serious personal injury or property damage. Use the accessory driveshaft to rotate the crankshaft.

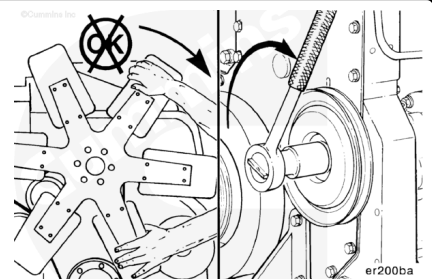


An inspection of the cooling fan is required daily. Check for cracks, loose rivets, and bent or loose blades. Check the fan to make sure it is securely mounted. Tighten the capscrews, if necessary.

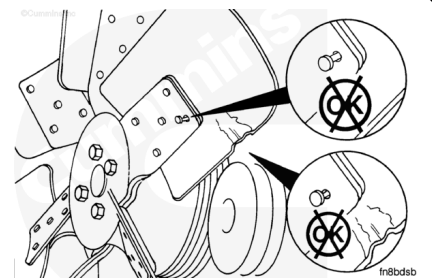


⚠ WARNING ⚠

Do not straighten a bent fan blade or continue to use a damaged fan. A bent or damaged fan blade can fail during operation, causing serious personal injury or property damage.

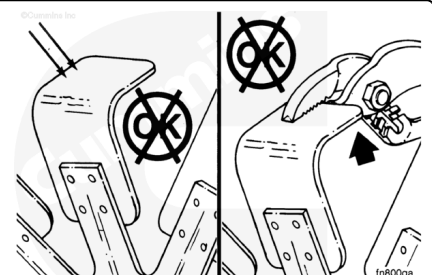

Replace any original equipment fan that is damaged with a fan of the identical part number. Cummins Inc. **must** approve any other fan changes.

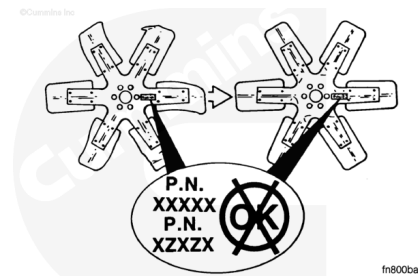

Install

Install the fan on the fan clutch assembly.

Tighten the mounting nuts to the manufacturer's specifications.

Install the fan clutch and fan assembly on the engine.

Tighten the capscrews.

Torque Value: 68 n•m [50 ft-lb]

Install, adjust, and tighten the fan drive belt. Refer to Procedure 008-002 in Section 8.

(/qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html)

Operate the engine and check for proper operation.

