


Trainings ▾


Maintenance Check

Check the shutters and the thermatic fan every 1500 hours or 1 year.

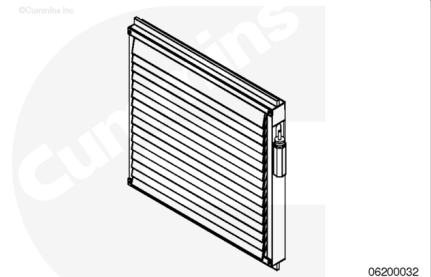


Check the shutters in the closed position to be sure they are completely closed.

Note : If the shutters are not closed, refer to the manufacturer's instructions.

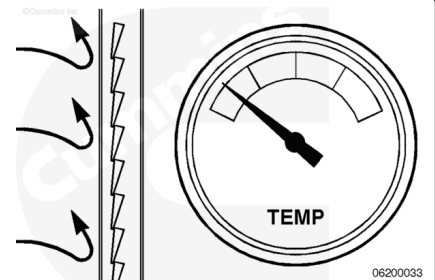

Be sure the shutters open completely at the desired temperature setting.

Note : If the shutters are not open, refer to the manufacturer's instructions.

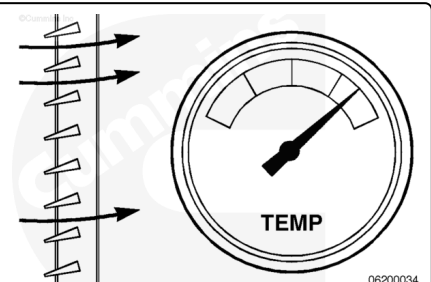

Shutters and thermatic fans **must** be set to operate in the same temperature range as the thermostat with which they are used.

