

Trainings ▾


Initial Check

Check the shutters in the closed position to be sure they are completely closed.


If the shutters are **not** closed, refer to the manufacturer's instructions.

Be sure the shutters open completely at the desired temperature setting.

If the shutters are **not** open, refer to the manufacturer's instructions.

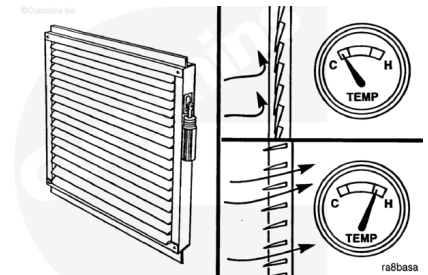

Shutters and thermatic fans **must** be set to operate in the same temperature range as the thermostat with which they are used. Compare to the Thermal Control Settings in Section V. Refer to Procedure 018-018 in Section V.
(/qs3/pubsys2/xml/en/procedures/35/35-018-018-tr.html)

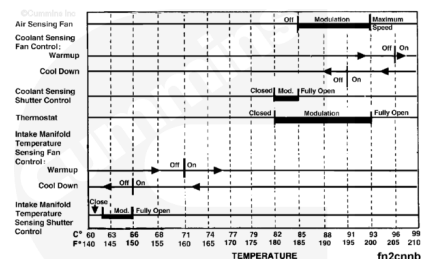

Install the shutter temperature sensor in the thermostat housing.

Do **not** install the shutter temperature sensing unit in the radiator top (expansion) tank.

