

Trainings ▾


General Information

The coolant flow that provides torque converter cooling is achieved in different manners.

M Series engines use a torque converter cooler disc inside the coolant bypass hose to direct engine coolant to the inlet side of the torque converter cooler.

1. Torque converter coolant supply
2. Torque converter disc (orifice)
3. Bypass hose
4. Water pump.

The disc functions as follows:

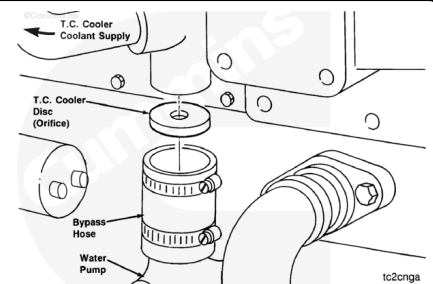

- Closed thermostat: Coolant flows from the engine through the thermostat housing and down the bypass hose. The disc directs coolant to the inlet side of the torque converter cooler.
- Open thermostat: Coolant flows from the engine through the thermostat to the radiator out from the radiator to the torque converter cooler to the water pump inlet. The disc prevents reverse flow around the torque converter cooler to the bypass hose and then to the water pump.

