


Trainings ▾

Flush


Marine Applications

Remove the hose from the sea water pump outlet.

Note : Place the hose into a container to catch the backflushed water.

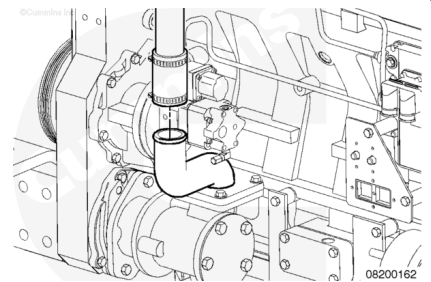


Remove the sea water discharge line from the gear cooler.

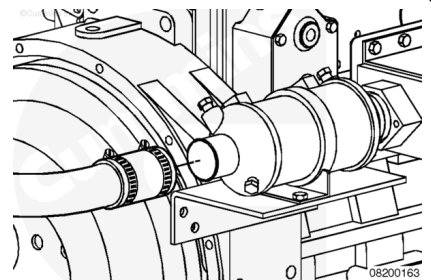


Using hose reducers, install a clean, fresh water supply to the outlet of the gear oil cooler.


Flush the sea water system.

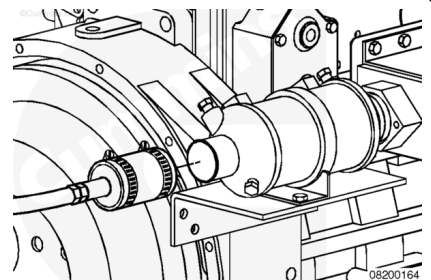

Remove the fresh water supply.

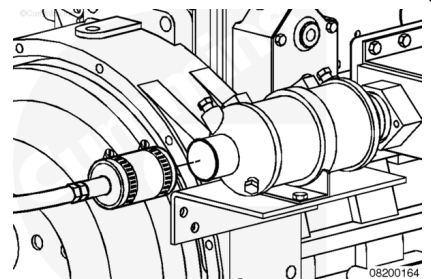

Install the sea water discharge line to the gear cooler.

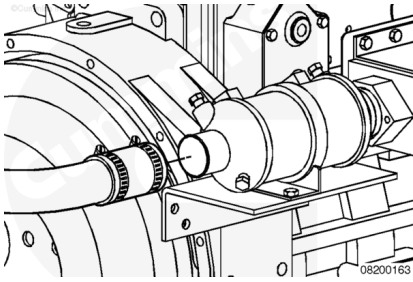

Install the sea water pump outlet line onto the sea water pump.

