

Trainings ▾


Preparatory Steps

- Remove the fuel pump. Refer to Procedure 005-016 in Section 5. (</qs3/pubsys2/xml/en/procedures/35/35-005-016-tr.html>)
- Remove the air compressor, if equipped. Refer to Procedure 012-014 in Section 12. (</qs3/pubsys2/xml/en/procedures/35/35-012-014-tr.html>)
- Remove the accessory drive pulley. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/35/35-009-004-tr.html>)
- Remove the accessory drive oil seal. Refer to Procedure 001-003 in Section 1. (</qs3/pubsys2/xml/en/procedures/35/35-001-003-tr.html>)




Remove

Remove the six capscrews and the accessory drive assembly.

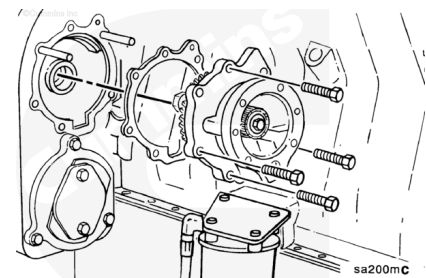


Clean

Clean the accessory drive to gear housing gasket surface.

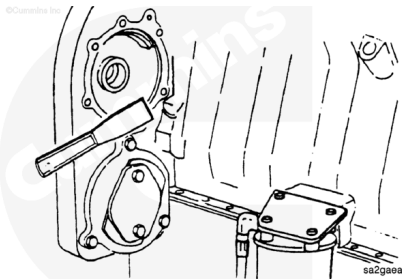


Clean the accessory drive oil seal surface on the front of the gear cover.

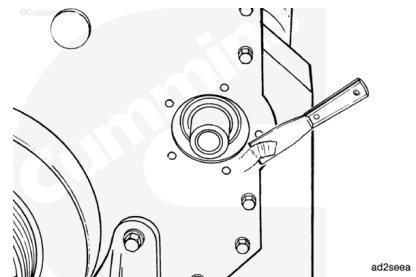

Install

⚠ CAUTION ⚠

Care must be used when installing the accessory drive gasket. If the gasket is twisted during the installation of the accessory drive, a leak path (1) will exist between the gasket and the oil passage port at point (2).

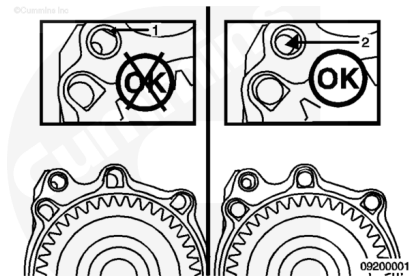

Use a small amount of grease or sealant to hold the gasket in place during installation. Use care **not** to block the oil passage.


The accessory drive shaft dowel pin **must** be at the 12 o'clock location when the accessory drive is installed. Make sure the camshaft gear timing mark "X" is visible through the inspection hole in the front of the gear cover.

Use a new gasket to install the accessory drive assembly.

The capscrew (1), located in the lower corner nearest the cylinder block, **must** be installed with a new copper sealing washer, Part Number 3882885, and thread sealant, Part Number 3823494, applied to the threads.

Install the six capscrews and tighten.

Torque Value: 47 n•m [35 ft•lb]

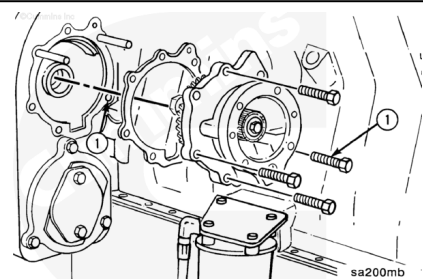

Finishing Steps

- Install the accessory drive oil seal. Refer to Procedure 001-003 in Section 1.
(/qs3/pubsys2/xml/en/procedures/35/35-001-003-tr.html)
- Install the accessory drive pulley. Refer to Procedure 009-004 in Section 9.
(/qs3/pubsys2/xml/en/procedures/35/35-009-004-tr.html)
- Install the air compressor, if equipped. Refer to Procedure 012-014 in Section 12.
(/qs3/pubsys2/xml/en/procedures/35/35-012-014-tr.html)
- Install the fuel pump. Refer to Procedure 005-016 in Section 5. (/qs3/pubsys2/xml/en/procedures/35/35-005-016-tr.html)
- Operate the engine to normal operating temperature and check for leaks.

