


Trainings ▾

Measure

Install a vacuum gauge or water manometer in the intake air piping.


The gauge adapter **must** be installed at a 90-degree angle to the airflow in a straight section of pipe, one pipe diameter before the turbocharger.

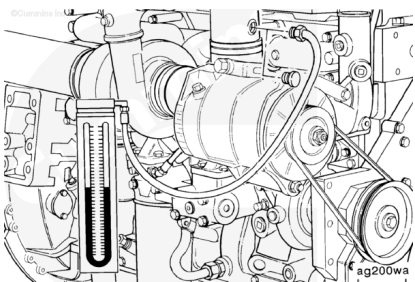

Operate the engine at full throttle and rated rpm with maximum load.


Record the data on the gauge or manometer.

Inlet Air Restriction		
mm-h2o		in-h2o
63.5	MAX	25.0

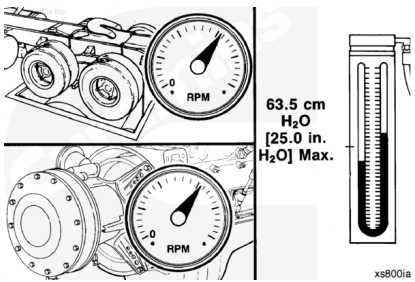


If restriction exceeds specifications:

- Replace or clean the air filter element. Refer to the OEM service manual.

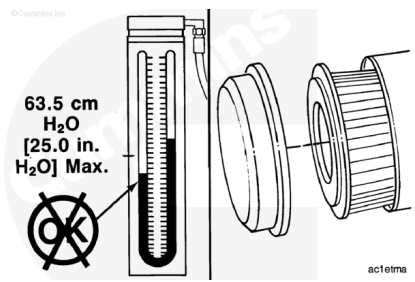

- Inspect the intake piping for damage. Refer to the OEM service manual.

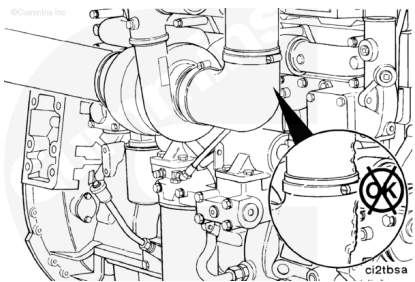

Remove the test equipment.

If damage resulted in coolant, oil, excessive fuel or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Refer to Procedure 014-013 in Section 14. (</qs3/pubsys2/xml/en/procedures/101/101-014-013.html>)

