


Trainings ▾

Install

⚠ CAUTION ⚠

The turbocharger control valve is very sensitive to contamination. Failure to prevent contamination from entering the turbocharger control valve air lines will cause damage to the turbocharger control valve.

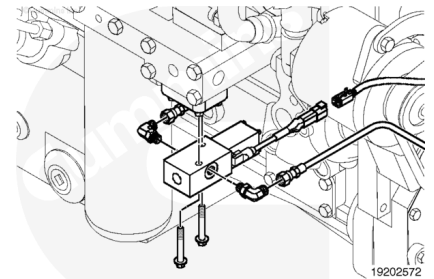

⚠ CAUTION ⚠

Do not use thread sealant. Use of thread sealant will cause damage to the turbocharger control valve.

Remove the masking tape from the ends of the turbocharger control valve air supply lines before installing.

Connect the air supply line to the turbocharger control valve.

Torque Value: 16 n•m [142 in-lb]

Connect the p-clip to the engine.

Torque Value: 20 n•m [177 in-lb]

Connect the air supply line to the turbocharger control shutoff valve.

Torque Value: 16 n•m [142 in-lb]