

Trainings ▾


Initial Check

Note : The illustrations shown will be of the SS model single cylinder air compressor. Differences in procedures for Holset® models SS, QE, ST, and Cummins® air compressors will be shown where necessary.

Verify the air governor signal line is plumbed correctly to the unloader port on the air compressor.


Disconnect and inspect the line for kinks, cuts, nicks or plugging inside the line.

Verify all unused ports (1) on the air governor are plugged except the exhaust port. The exhaust port (2) **must** be vented to the atmosphere at all times.

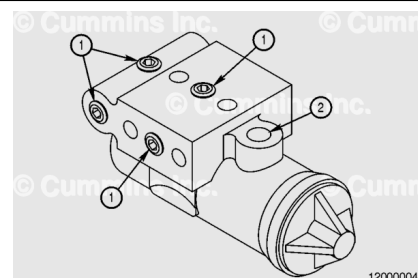

Operate the engine to activate the air compressor.


If the air compressor is pumping, the air governor is malfunctioning and **must** be repaired or replaced. Refer to the original equipment manufacturer (OEM) service manual.

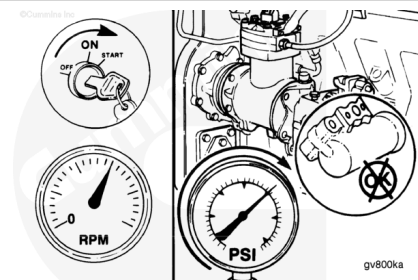

If the air compressor does **not** pump, remove, clean, and inspect the air compressor unloader valve assembly. Refer to Procedure 012-013 in Section 12 (</qs3/pubsys2/xml/en/procedures/35/35-012-013-tr.html>) and the Holset® Air Compressor Master Repair Manual, Bulletin 3666121 (Holset® **only**).

If the unloader valve assembly is okay, clean and inspect the exhaust valve assembly. Refer to the Holset® Master Repair Manual, Bulletin 3666121 (Holset® **only**).

Activate the air compressor and allow the air pressure to buildup.

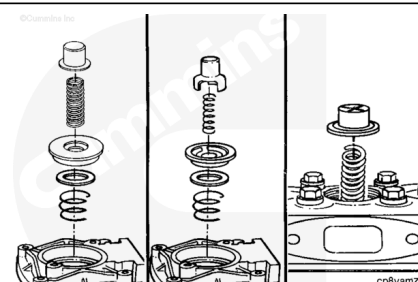

If pressure is reading below 125 psi according to the dash guage, relieve 25 psi of pressure by applying the vehicle brakes to see if the air compressor starts to pump again.

If the air compressor **only** pumps to the level it was before then the air governor needs to be inspected for proper operation. Refer to OEM service manual.

Note : Not all air compressors referenced can be used on each engine or application.