


Trainings ▾

Initial Check

Verify the unused unloader port, if applicable, on the air compressor has a pipe plug installed.


Verify all unused ports are plugged with pipe plugs except for the exhaust port on the air governor. The air governor exhaust port should **always** be ventilated to the atmosphere.

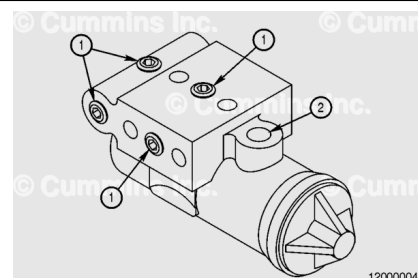

Operate the engine to activate the air compressor.

With the air compressor pumping between 550 to 690 kPa [80 to 100 psi], use a solution of soapy water to check for air leaks in the following areas:

- Air compressor cover gasket
- Unloader body o-ring (Holset® **only**)
- Air compressor head gasket
- Air compressor valve plate gasket (Holset® QE models **only**)
- Fittings and hoses connected to the intake, discharge, and air governor signal line on the air compressor
- Fittings and hoses connected at the air governor, wet tank, and the air dryer.

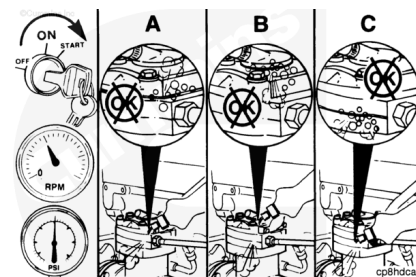

If air leaks are found, replace the leaking gasket or o-ring.

Refer to the Holset® Air Compressor Master Repair Manual, Bulletin 3666121 (Holset® **only**).

If air leaks are found at the air compressor head or cover gasket, verify that the air compressor head and cover bolts are torqued properly. Refer to Procedure 012-007 in Section 12. (</qs3/pubsys2/xml/en/procedures/101/101-012-007-tr.html>)

Shut the engine OFF. Check for air leaks both at keyswitch OFF and keyswitch ON.

Note : Some components at keyswitch ON may mask the sound of an air leak.

Walk around the vehicle and listen for air leaks from the rest of the air system **not** already inspected.

Note : Not all air compressors referenced can be used on all engines or applications.

Last Modified: 01-Mar-2013
