


## Trainings ▾

### Remove

Remove the hoses and hose clamps from the mixer, the air compressor tube at the rear of the engine and from the air compressor.

Remove the flange nut that holds the air compressor supply tube to the intake manifold.

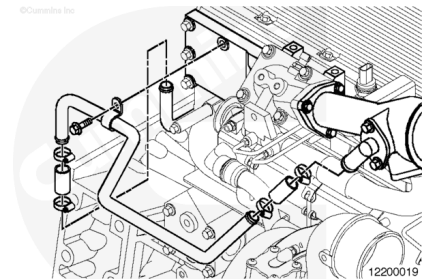

Remove the flange nut holding the air compressor inlet tube to the rear of the cylinder head fuel rail.

Remove the air compressor inlet tube sections from the engine.

