

Trainings ▾

Preparatory Steps

- Remove the alternator drive belt. Refer to Procedure 013-005 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-005-tr.html>)
- Remove the alternator. Refer to Procedure 013-001 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-001-tr.html>)




Remove

Note : This step is for the removal of the right-side mounted alternator bracket.


Remove the belt tensioner from the alternator bracket.

Remove the three alternator bracket mounting capscrews and remove the alternator mounting bracket.

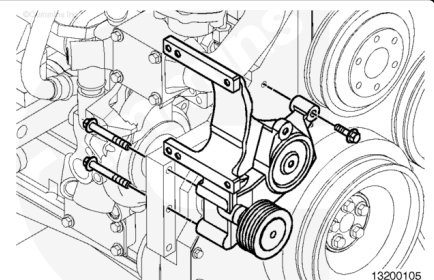

Note : This step is for the removal of the left-side mounted alternator bracket.

Remove the four mounting capscrews and remove the alternator mounting bracket.

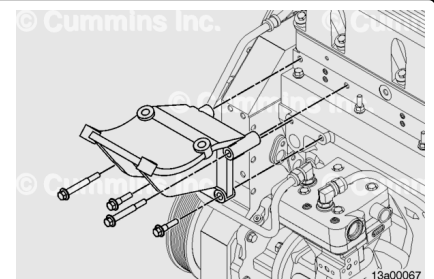

Inspect for Reuse

Inspect the alternator mounting bracket for cracks.

Replace if cracked.

Inspect underneath the alternator and belt tensioner for wear.

If wear is found, replace the alternator bracket.

Note : The idler pulley **only** needs to be checked for the right-side mounted alternator bracket.

Check the idler pulley for cracks or other damage.


Replace the idler pulley if cracks or other damage is found.

To check for proper operation of the idler pulley, spin the pulley while it is installed on-engine.

If the pulley continues to spin after 5 seconds, then it is free spinning and needs to be replaced.

If the pulley does **not** spin at all, then the bearing is seized and the idler pulley needs to be replaced.


Note : The bearings inside new idler pulleys (less than 10,000 miles) will need a break-in time period. The idler pulley may **not** spin as easily as an idler pulley that has 100,000 miles.

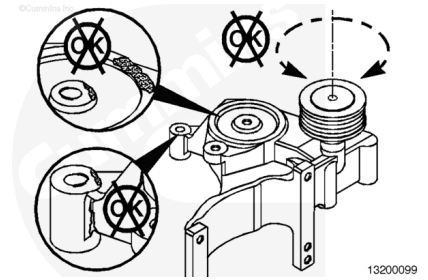

Disassemble

Note : This step is **only** for the right-side mounted alternator bracket.

Remove the capscrew, cover plate, axle shaft, and the idler/bearing assembly.

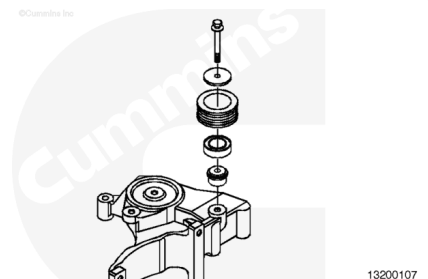


Assemble

Note : This step is **only** for the right-side mounted alternator bracket.

Install the axle shaft, the idler/bearing assembly, the cover plate, and tighten the capscrew.

Torque Value: 47 n•m [35 ft-lb]

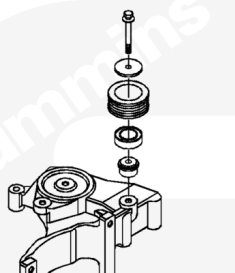


13200107

Install

Note : This step is for the installation of the right-side mounted alternator bracket.

Install the alternator bracket and tighten the capscrews.

Torque Value: 47 n•m [35 ft-lb]

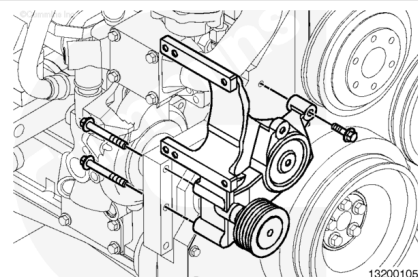


13200105

Note : This step is for the installation of the left-side mounted alternator bracket.

Install the alternator bracket and tighten the capscrews.


Torque Value: 65 n•m [48 ft-lb]

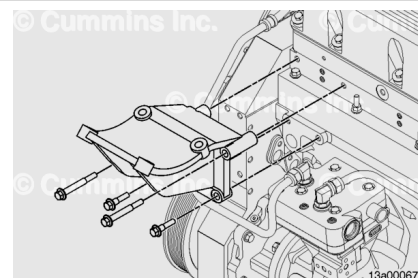

13a00067

Finishing Steps

- Install the belt tensioner. Refer to Procedure 013-021 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-021-tr.html>)
- Install the alternator. Refer to Procedure 013-001 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-001-tr.html>)
- Install the alternator belt. Refer to Procedure 013-005 in Section 13. (</qs3/pubsys2/xml/en/procedures/35/35-013-005-tr.html>)
- Operate the engine and check for proper operation.

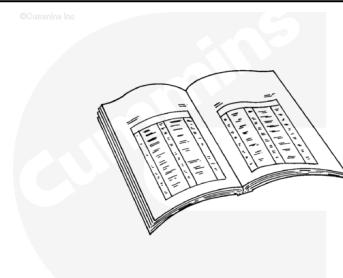

ck800wa

Last Modified: 21-Jan-2013
