


Trainings ▾

Remove

WARNING


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

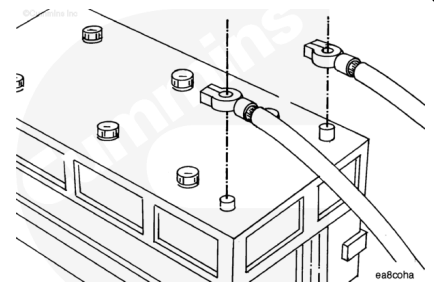


Note : The starting motor mounting capscrews can be metric or standard thread sizes. Make sure to install the same-size capscrews that were removed.

Remove the electrical connections from the batteries.

Tag and remove the electrical connections from the starting motor.

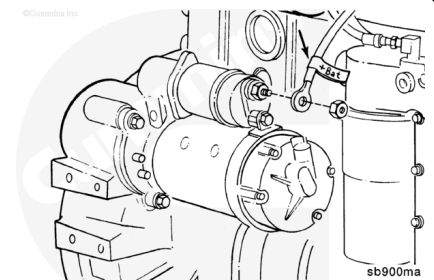

Remove the three capscrews and the starting motor.

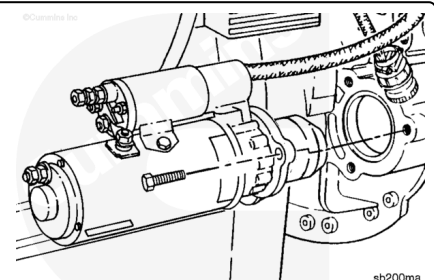


Install

Before installing the starting motor, make sure the capscrews are the correct size and grade.


Install the starting motor and the three mounting capscrews.

Tighten the capscrews.

Torque Value: 90 n•m [66 ft-lb]

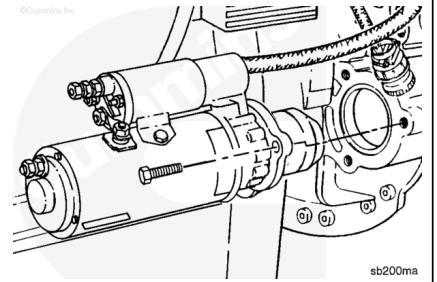


Install and tighten the electrical connections to the starting motor.

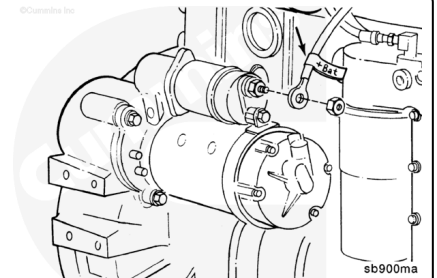

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

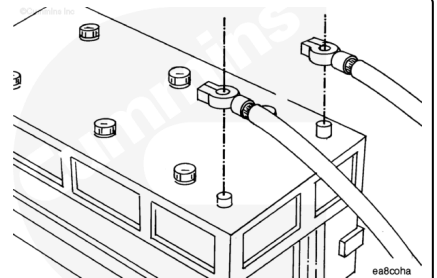

Install and tighten the battery electrical connections.