

Trainings ▾


Install

Apply a coating of thread sealant, Part Number 3823494, to the three capscrews at locations 1, 2 and 3.

Install the front support and mounting capscrews.

Torque Value:

1. 68 n•m [50 ft-lb]
2. Plus 60 degrees (1 flat)

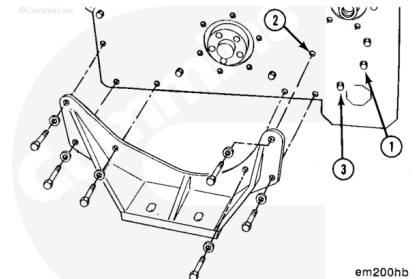

Lower the front of the engine.

Install the front engine mount capscrews.

Tighten the capscrews. Refer to the OEM service manual.

Remove the lifting fixture or hoist from the front of the engine.

